## **Naval Surface Warfare Center**

## **Carderock Division**

West Bethesda, MD 20817-5700

NSWCCD-65-TR-2001/03 January 2001

Survivability, Structures, and Materials Directorate Technical Report

# Structural Analysis of Helicopter Flight and Hangar Decks

by

Jessica Stainback



20010507 081



#### **DEPARTMENT OF THE NAVY**

NAVAL SURFACE WARFARE CENTER, CARDEROCK DIVISION 9500 MACARTHUR BOULEVARD WEST BETHESDA MD 20817-5700

> 9130 Ser 65-35 23 Jan 01

From: Commander, Naval Surface Warfare Center, Carderock Division

To: Commander, Naval Air Systems Command (AIR 7.6.2)

Subj: HELICOPTER HANDLING DECK CERTIFICATION

Ref: (a) Work Request N0001900WXCF07Y

Encl: (1) NSWCCD-65-TR-2001/03, Structural Analysis of Helicopter Flight and Hangar Decks

1. Reference (a) requested the Naval Surface Warfare Center, Carderock Division (NSWCCD) to certify air capable ships for operations with Navy helicopters CH-60S and SH-60R. Enclosure (1) is a manual to accompany DDS 130-2. Both documents describe the procedure used to analyze the strength of helicopter handling decks.

2. Comments or questions may be referred to the author, Ms. Jessica Stainback, Code 651; telephone (301) 227-5374; e-mail, StainbackJ@nswccd.navy.mil.

J. E. BEACH By direction

Copy to:

COMNAVSEASYSCOM WASHINGTON DC [SEA 05P1] DTIC FORT BELVOIR VA NAVSURFWARCEN CARDEROCKDIV BETHESDA MD [Codes 3442 (TIC), 60 (w/o encl), 65, 65R (2), 651 (15), 652, 653, 654, 655]

## Naval Surface Warfare Center Carderock Division

West Bethesda, MD 20817-5700

NSWCCD-65-TR-2001/03 January 2001

Survivability, Structures, and Materials Directorate

Technical Report

# Structural Analysis of Helicopter Flight and Hangar Decks

by

Jessica Stainback

Approved for public release; distribution is unlimited.

## REPORT DOCUMENTATION PAGE

Form Approved OMB No. 0704-0188

Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing this collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden to Department of Defense, Washington Headquarters Services, Directorate for Information Operations and Reports (0704-0188), 1215 Jefferson Davis Highway, Suite 1204, Arlington, VA 22202-4302. Respondents should be aware that notwithstanding any other provision of law, no person shall be subject to any penalty for failing to comply with a collection of information if it does not display a currently

4302. Respondents should be aware that notwithstanding valid OMB control number. PLEASE DO NOT RETURN YOU	any other provision of law, no person shall be subject to any penalty for failing to DUR FORM TO THE ABOVE ADDRESS.	
1. REPORT DATE (DD-MM-YYYY)	2. REPORT TYPE	3. DATES COVERED (From - To)
22-Jan-2001	Final	-
4. TITLE AND SUBTITLE		5a. CONTRACT NUMBER
Showshowel Amplugia of Wol	icopter Flight and Hangar Decks	N0001900WXCF07Y
Structural Analysis of her	reopter Fright and hangar beeks	5b. GRANT NUMBER
		E. DOCODAN ELEMENT NUMBER
		5c. PROGRAM ELEMENT NUMBER
6. AUTHOR(S)		5d. PROJECT NUMBER
Jessica Stainback		5e. TASK NUMBER
		5f. WORK UNIT NUMBER
		A PERSONAL ORGANIZATION DEPORT
7. PERFORMING ORGANIZATION NAME(	S) AND ADDRESS(ES) AND ADDRESS(ES)	8. PERFORMING ORGANIZATION REPORT NUMBER
Naval Surface Warfare Cent	er	
Carderock Division		NSWCCD-65-TR-2001/03
9500 Macarthur Boulevard		
West Bethesda, MD 20817-57	00	
	ANAME (O) AND ADDDECC(FC)	10. SPONSOR/MONITOR'S ACRONYM(S)
9. SPONSORING / MONITORING AGENCY	NAME(S) AND ADDRESS(ES)	10. SPONSOR MONITOR S ACRONTM(S)
Attn AIR 7.6.2		,
Commander		11. SPONSOR/MONITOR'S REPORT
Naval Air Systems Command		NUMBER(S)
1421 Jefferson Davis Hwy		110:110111(0)
Arlington VA 22243		

#### 12. DISTRIBUTION / AVAILABILITY STATEMENT

Approved for public release; distribution is unlimited.

#### 13. SUPPLEMENTARY NOTES

#### 14. ABSTRACT

This publication clarifies and modernizes the text in the current Design Data Sheet, DDS 130-2, used to analyze the structural strength of US Navy ship helicopter flight and hangar decks. This document explains the DDS 130-2 procedure to provide a better understanding of the methodology. The DDS 130-2 and this document provide a uniform standard and simplified method for the strength analysis of the helicopter flight and hangar deck structure on US Navy Ships. The analysis method is specifically for helicopter operations. Any other loading conditions or aircraft operations in the handling areas should be considered separately. The DDS 130-2 includes helicopter with both wheeled and skid type landing gear, this paper focuses on helicopters with wheeled gears only.

#### 15. SUBJECT TERMS

ship structures, helicopters, flight and hangar decks

16. SECURITY CLASSIFICATION OF:		17. LIMITATION OF ABSTRACT	18. NUMBER OF PAGES	19a. NAME OF RESPONSIBLE PERSON Jessica Stainback	
a. REPORT UNCLASSIFIED	b. ABSTRACT UNCLASSIFIED	c. THIS PAGE UNCLASSIFIED	SAR	67	<b>19b. TELEPHONE NUMBER</b> (include area code) (301) 227-5374

## Contents

Pag	
Figuresiv	,
Tablesv	
Administrative Informationvi	į
Acknowledgementsvi	i
Summary1	
Introduction2	
Operations and Conditions3	
General Helicopter Operations	
RAST System 4	
Landing and Parking Conditions	
Storm and Moderate Seas	
Ship Motions5	
Loading6	
Load Case Summary	
Landing Loads	
Parking Loads7	
Ship Motion Loads	
Helicopter Orientation9	
Wind Loads9	
Tiedowns	
Gear Reactions	
Variation in Loading due to RAST System14	
Landing Loads	
Parking Loads	
Structural Framing of Handling Area	
Design Criteria	3
Plating	
Stiffener Bending Strength	
Stiffener Shear Strength	
Wheel Load Distribution	
Description of Load Distribution	
Tire Footprint Size	
Loading Variations due to Orientation	
Structural Analysis 30	
Structural Parameters 30	
Primary Stress 32	
Deck Plating Analysis32	
Stiffener Analysis	
Effective Span Lengths	
Maximum Stiffener Bending Moment and Stress	
Maximum Stiffener Shear Stress40	
Beams, Girders, and Stanchions41	1
Analytical Tools42	
Finite Element Analysis42	

## **Contents**

-	Pag	
Exce	el Spreadsheet42	
	s44	
	dations44	
	46	
Bibliograph	hy47	
Appendix A	A - Data Sheets for Navy Helicopters	1
Appendix E	3 - Standard Worksheet for Navy Ship StructureB-1	1
Appendix (	C - Example	1
	and Definitions D-1	
Glossary	G-:	1
	Figures	
Figure 1.	Longitudinal Free Body Diagram of Helicopter11	
Figure 2.	Transverse Free Body Diagram of Helicopter	
Figure 3.	Transverse Free Body Diagram of Helicopter for RAST System 15	
Figure 4.	Inboard Profile Stern of Ship - NAVSEA Drawing 101-621937818	
Figure 5.	Compartment and Access of Handling Area, NAVSEA Drawing 101-	
	6218623	
Figure 6.	Structural Scantling Plan Stern to Frame 378, NAVSEA Drawing 100-	
	6218844 20	
Figure 7.	Structural Scantling Plan Frame 378 to Frame 246, NAVSEA Drawing	
	100-621884421	
Figure 8.	Structural Scantling Plan Frame 246 to Frame 220, NAVSEA Drawing	
	100-6218844	
Figure 9.	Tire Footprint	
Figure 10.	Graphical Illustration of Tire Load	
Figure 11.	Patch Load Dimensions, Condition A	
Figure 12.	Patch Load Dimensions, Condition B	
Figure 13.	Patch Load Dimensions, Condition C	
Figure 14.	Patch Load Dimensions, Condition D	
Figure 15.	Combined Stiffener and Plate Section	
Figure 16.	Dual Patch Equivalent Load Factor for Plating	
Figure 17.	Patch Width Load Distribution Factor35	
Figure 18.	Plating Load Distribution Factor36	
Figure 19.	Dual Patch Equivalent Load Factor for Stiffeners	
Figure 20.	Stiffener Bending Moment Correction for Elastic Supports Coefficient 37	

## **Tables**

		Page
Table 1.	Helicopter Weight for Deck Analysis	7
Table 2.	Tire Footprint Load Table	26
Table 3.	Provided Tire Footprint Load Data	26
Table 4.	Percentage of Design Primary Stress for Strength Decks	32
Table 5.	Deck Function, C <sub>o</sub> , for Steel or Aluminum	33
Table 6.	Effective Span Factor	35

#### **Administrative Information**

The work described in this report was performed by the Structures and Composites Department (Code 65) of the Survivability, Structures and Materials Directorate at the Naval Surface Warfare Center, Carderock Division (NSWCCD). The work was funded by the Naval Air Systems Command (AIR – 7.6.2) as requested by work request number N0001900WXCF07Y.

This paper was presented to the University of Maryland as partial fullfilment of the requirements for the degree of Master of Science in Civil Engineering. The work was partially funded by the Naval Air Systems Command.

## **Acknowledgements**

The authors would like to thank the several individuals for their contribution to this work. Valuable comments and suggestions were made by James Rodd and Ely Fishlowitz (NSWCCD 651). Advice, background information, and explanations on DDS 130-2 were provided by Michael Sieve (NAVSEA 05P1) and Gregory Woods (NSWCCD 652). Major Ian Lightbody CAF (NAVAIR PMA-299) provided background information for helicopter handling and operations. University of Maryland professor Dr. Pedro Albrecht made additional comments and suggestions.

## **Summary**

Each flight-capable ship is certified for operations with specific helicopters. Before a ship is certified for a particular helicopter, the entire handling area must be analyzed to ensure that the deck structure will safely support the landing and parking of the helicopter. The current Design Data Sheet, DDS 130-2 (Naval Sea Systems Command, 1984), provides a uniform standard and simplified analysis method for the handling area structure on US Navy Ships. This analysis determines the resulting stresses on the deck structure imposed by helicopter operations. Then, the procedure compares the imposed stresses to the permissible stresses as discussed herein. If the imposed stresses are less than those permitted, then the ship can be certified and operations with a particular helicopter may proceed.

The following is a detailed procedure on how to analyze helicopter-handling decks for US Navy ships. This paper is a guide to Design Data Sheet DDS 130-2 (Naval Sea Systems Command, 1984). DDS 130-2 is the standard analysis method set by the Naval Sea Systems Command (NAVSEA) to certify ships for operations with helicopters. This guide discusses each aspect of the analysis. The landing and parking of a helicopter on the ship's flight and hangar deck induces stresses in the structure. These stresses depend upon the helicopter weight and characteristics, sea condition, ship motion, and framing properties. The calculated stresses are compared to the allowable stresses of the structural material. If the calculated stresses are less than the allowable stresses then that specific type of helicopter can operate with that ship. Each part of this guide explains different aspects of the procedure with the associated calculations.

## Introduction

This paper is a guide to clarify the procedure outlined in Design Data Sheet, DDS 130-2, which is used to analyze the structural strength of helicopter flight and hangar decks on US Navy ships. This document explains the DDS 130-2 procedure to provide a better understanding of the methodology. The DDS 130-2 and this document provide a uniform standard and simplified method for the strength analysis of the helicopter flight and hangar deck structure on US Navy Ships.

The analysis method is specifically for helicopter operations. Any other loading conditions or aircraft operations in the handling areas should be considered separately in accordance with the *General Specifications for Ships of the U.S. Navy* (NAVSEA) and the *Structural Design Manual for Surface Ships of the U.S. Navy* (NAVSEA). In addition, the DDS 130-2 includes helicopters with both wheeled and skid type landing gear. This paper focuses on helicopters with wheeled landing gear only. If a helicopter with skids requires certification, this paper is applicable, however refer to DDS 130-2 for the loading calculations.

This procedure is an adaptation from the *Design Manual for Orthotropic Steel Plate Deck Bridges* (American Institute of Steel Construction, 1963) and the *Design of Deck Structures under Wheel Loads* (Royal Institute of Naval Architects, 1980). The analysis incorporates Navy experience and research. Member interaction and static indeterminacy of the deck structure are taken into account. The plating analysis incorporates localized plasticity, membrane effects, and makes use of simplified approximations for the elastic-plastic behavior. The longitudinal stiffener analysis incorporates the transverse beam flexibility effects and grillage effects. The approach is based on strip theory and use of design curves and influence lines is extensive. Only the governing load placement of the helicopter gears is used to determine the maximum stress in the deck plating and longitudinal stiffeners. Naval Sea Systems Command (NAVSEA) has developed a spreadsheet to facilitate the analysis. In September 2000, the Naval Surface Warfare Center, Carderock Division (NSWCCD), Code 651 updated the spreadsheet.

## **Operations and Conditions**

## **General Helicopter Operations**

Helicopter operations aboard US Navy ships are standardized by the Naval Air Systems Command (NAVAIR), which outlines procedures for securing and handling helicopters in the technical manual *Aircraft Securing and Handling* (NAVAIR). The conditions of the sea and the ongoing helicopter operation will determine how exactly these procedures will be carried out.

Helicopters usually land in the designated circle on the flight deck, but may need to land outside the circle during a special operation. Therefore, the deck must be analyzed for landings anywhere. "Loading" suggests several spots.

The orientation of the helicopter with respect to the ship affects the loading acting on the deck structure. Ships such as frigates, destroyers, and auxiliaries normally have small flight decks. On these decks, the helicopter parks at an angle with respect to the ship, and location variations are limited. On larger ships, such as amphibious assault ships, the helicopter parks either longitudinally or transversely with respect to the ship, and the location can vary over the length and breath of the ship. The location affects the magnitude of the load. The orientation determines how the individual structural members must be loaded. Assume that the longitudinal or athwartship orientation produces greater loading conditions than angled orientations. Therefore, in the analysis consider only the longitudinal and athwartship orientations.

The length of time the helicopter stays aboard ship determines where and how it is tied down. During short stays, the helicopter is immediately chocked and chained where it landed. During longer stays, the helicopter is moved into the hangar, if one is available. Armament is removed when the helicopter stays aboard longer or before it is moved into the hangar. This reduces the weight of the helicopter, and decreases the hazard risk to the ship. If the helicopter is aboard for only a short period, then the armament may remain on the helicopter. The helicopter is moved into the hangar either via an aircraft elevator, Recovery Assist, Securing, and Traversing (RAST) system, or by manual and equipment hauling. Once in the hangar, the helicopter is chocked and chained. The chocks and chains are defined as tiedowns in the following analysis. If the ship has an aircraft elevator, then that elevator must also be analyzed and certified.

The current sea condition determines the operation status. Helicopters are to land and transit only in light to moderate sea conditions. A heavy sea landing can occur only if the ship has a RAST system. Use aircraft elevators only through moderate seas. During storm seas, park all helicopters in the hangar, if possible. On ships with large flight decks or without hangars, the flight deck structure should support parking during storm seas. Otherwise, the helicopter must disembark.

## Recovery Assist, Securing, and Traversing (RAST) System Operations

Some smaller ships are equipped with a RAST system, which enables the LAMPS MK III (SH-60B) and similar helicopters to land and move into the hangar in heavy sea conditions.

The RAST system consists of three parts: recovery assist, rapid securing, and the RAST track. The recovery assist system aboard the ship and the helicopter's securing system work together to guide the landing of the helicopter. The recovery assist system consists of two winch driven cables, which help to reduce landing dispersions. The rapid securing device is a vise-like trap on the deck. This system uses a probe to aid the helicopter landing and transiting. The probe attaches underneath the helicopter between the main gears. The probe comes up from the track through the rapid securing device to connect to the helicopter. The rapid securing device and the probe run along the track to transit the helicopter into the hangar.

While the helicopter is hovering above the deck, just before touchdown the cables are attached to the helicopter. The recovery assist cable can apply up to 5000 pounds of constant tension to guide the helicopter main gear probe connection into the rapid securing device probe. After the probe is attached to the helicopter properly and the helicopter has landed, the jaws of the device close to secure the probe. Once secured, the tension in the cables is released. The cables are then attached to the helicopter tail to align the tail with the RAST track for transiting. Once aligned with the track, the helicopter is moved into the hangar by the system. This setup helps prevent the helicopter from sliding or overturning on the deck. Furthermore, the probe is an integral part of the system and is rarely removed during the entire time the helicopter is aboard.

## Landing and Parking

This analysis considers only the loading conditions imposed by the helicopter on the handling area structure. The landing and parking of the helicopter are the two loading conditions. The landing condition is the touchdown of the helicopter on the deck. The helicopter main and auxiliary gear reactions on the deck are the landing loads. The landing condition includes the longitudinal and athwartship helicopter orientations as separate cases. After the landing, the remaining time the helicopter is aboard is the parking condition. The parking condition must consider storm and moderate seas as two different cases. Then both helicopter orientations must be analyzed for each sea condition. The maximum gear reactions determined for the maximum weight (fully loaded) and parking weight are the parking loads.

#### **Storm and Moderate Seas**

As mentioned before, there are restrictions and procedures for helicopter operations in different sea conditions. The sea condition only effects helicopter parking loads. This analysis only considers storm and moderate seas. Storm seas relate to a Sea State 7, and moderate seas to a Sea State 5. The North Atlantic Treaty Organization (NATO) sets the following design criteria for the two sea states (NATO):

#### Sea State 7:

- Moderately high waves
- 24-ft significant wave height
- Wind velocity of 48 to 55 knots
- Visibility is reduced
- There is a 5 percent chance that a ship will be in an environment exceeding a Sea State 7 during average ship service at sea

#### Sea State 5:

- Moderate waves
- 10-ft significant wave height
- Wind velocity 22 to 27 knots
- There is a 30 percent chance that a ship will be in an environment exceeding a Sea State 5 during average ship service at sea

Significant wave height is the average wave height of the highest one third of the waves.

## **Ship Motions**

After landing the helicopter is subject to inertial forces produced by the ship's motions, which include the roll, pitch, yaw, surge, sway, and heave. These forces effect the entire ship and its holdings. The effect varies depending upon the location in the ship. Generally, the greater the distance from the ship's center of motion, the greater the inertial force. These forces are also dependent on the ship's characteristics, such as the ship's response to a sea condition. Motion coefficients are developed for each ship and are provided in the ship specifications (NAVSEA). These coefficients along with the holding self-weight determine the acting inertial forces.

## Loading

The following are suggested locations in the helicopter handling area for analysis:

- (1) Center of landing circle
- (2) Outboard and aft of landing circle
- (3) Transition from landing circle to hangar
- (4) Hangar

These locations are subjected to the following load cases:

- (1) Landing, longitudinal orientation
- (2) Landing, athwartship orientation
- (3) Parking, storm sea condition, longitudinal orientation
- (4) Parking, storm sea condition, athwartship orientation
- (5) Parking, moderate sea condition, longitudinal orientation
- (6) Parking, moderate sea condition, athwartship orientation

This part explains the steps to calculate the applied load, or critical gear load R, used in the analysis. Below is a loading summary for all cases. Note, the landing load case does not apply for locations in the hangar.

The critical gear load, R, is determined from the combination of the gear reaction and loading distribution which creates the worst loading condition for the given sea condition and helicopter orientation. The gear load distribution effects can vary between gears due to the number of wheels, tire size, or operational pressure. Gear load distribution is discussed in "Wheel Load Distribution." Both the load magnitude and the wheel distribution affect the strength analysis. If the gear load reactions are close in value, then perform a strength analysis on both of the gear reactions. Normally, the load magnitude has the larger effect, therefore:

Critical Gear Reaction Load R = maximum helicopter gear reaction  $(R_2, R_A)$ 

## **Load Case Summary**

Landing (both orientations):

maximum nominal helicopter gear reaction

Parking (both orientations):

maximum calculated gear reaction

Storm Seas

Flight deck:

helicopter parking weight (ship motion factors) + tiedown

force + wind force

Hangar deck:

helicopter parking weight (ship motion factors) + tiedown

force

Moderate Seas

Flight deck:

helicopter maximum weight (ship motion factors) + wind force

Hangar deck:

helicopter parking weight (ship motion factors)

### **Landing Loads**

The landing load only applies on the flight deck. For the landing calculations use the nominal landing reaction as the critical gear load R, which is provided by the helicopter manufacturer. The manufacturer bases these results on their own laboratory tests and analysis. Gear loads are probabilistic and depend on the rate and attitude of descent, gear configuration, tire characteristics, and helicopter landing weight. Gear loads should be representative of the maximum expected load resulting from normal operations, not the maximum gear collapse load. Past landing load predictions have been based on a sink rate of 12 ft/s, which is a very harsh landing. During current discussions it has been recommended to base the loading prediction on an 8 ft/s sink rate, still a hard landing.

## **Parking Loads**

The parking load applies to all the handling areas. The critical gear reaction is a function of helicopter inertial loads due to ship motions, helicopter tiedown forces, wheel friction, and wind forces. How to determine each of these factors is discussed in this section.

Analyze for both storm and moderate seas at both helicopter orientations. Parking loads are highest during storm seas and most frequent during moderate seas. Generally, the former are about twice as high as the latter.

When ship motions are not affecting the helicopter, the weight is proportionally distributed between the three wheels. This even distribution to the gears is the static gear load reactions. When ship motions are affecting the helicopter, the weight is unevenly distributed, as is the case here. The helicopter manufacturer provides two helicopter weights:

Wm	helicopter, fully fueled, armed, with crew (kip)
Wp	helicopter, fully fueled without armament and crew (kip)

The flight deck is designed to support the maximum weight; the hanger, the parking weight. During storm seas the helicopter must have its armament removed, therefore the weight is reduced to the parking weight. Table 1 summarizes the design load as a function of the sea condition and location on the ship.

Table 1: Helicopter Weight for Deck Analysis

Sea Condition		Location on Ship	
Sea Condition	Flight Deck	Hangar Deck	Elevator Platform
Storm Seas	Wp	Wp	N/A
Moderate Seas	Wm	Wp	Wp

#### **Ship Motion Loads**

Ship motions apply an inertial force increasing the weight of the helicopter. The ship motion loads depend on the ship motion factors. These factors are a function of the distance from the

helicopter's center of gravity to the ship's assumed center of motion and on the characteristics of the ship. In the *General Specifications for Ships of the U.S. Navy*, Section 070 or Section 9020-01 (NAVSEA) lists coefficients, which represent the ship characteristics. Coefficients are provided for storm seas, with factors relating to moderate seas. The ship motion factor equations are as follows:

K <sub>1-12</sub>	ship motion coefficients
X	longitudinal distance from helicopter CG to longitudinal center of motion of ship (ft)
Y	transverse distance from helicopter CG to ship centerline (ft)
Z	vertical distance from flight deck to vertical center of motion of ship (ft)
$Z_{G}$	height of helicopter CG above flight deck (in)

## Ship Motion Factors - Storm Seas

Forward and aft:  $\eta_{xs} = K_1 + K_2 X + K_3 \left( Z + \frac{Z_G}{12} \right)$ 

Port and starboard:  $\eta_{yx} = K_4 + K_5 X + K_6 Y + K_7 \left( Z + \frac{Z_G}{12} \right)$ 

Downward:  $\eta_{zs} = K_8 + K_9 X + K_{10} Y$ 

## Ship Motion Factors - Moderate Sea Conditions

Forward and aft:  $\eta_{mx} = K_{11}\eta_{xs} \cdots or \Rightarrow \frac{1}{2}\eta_{xs}$ 

Port and starboard:  $\eta_{my} = K_{12}\eta_{ys} \cdots or \Rightarrow \frac{1}{2}\eta_{ys}$ 

Downward:  $\eta_{mz} = \frac{1 + \eta_{zs}}{2}$ 

If the  $K_{11}$  and  $K_{12}$  coefficients are not specified, then set as one half.

The ship motion forces are the product of the ship motion factors and the helicopter weight specified in Table 1. These ship motion forces act at the center of gravity of the helicopter and produce the deck loads.

Fi	ship motion force in <i>i</i> direction (kip)
$\eta_i$	ship motion factor in i direction
$W_{\rm j}$	weight of helicopter for j condition (kip)
i	x, y, and z directions with respect to ship
j	maximum or parking weight of helicopter, according to Table 1

## Ship Motion Force

 $F_i = \eta_i W_j$ 

#### **Helicopter Orientation**

The orientation of the helicopter with respect to the ship affects how the individual structural members must be loaded. Each ship motion induced load must be reoriented with respect to the helicopter for each loading orientation.

$F_{L}$	ship motion force longitudinal to helicopter (kip)
$F_{T}$	ship motion force transverse to helicopter (kip)
$F_{D}$	downward ship motion force (kip)

#### Force Orientation

Helicopter oriented longitudinally to ship:

 $F_L = F_X$ 

 $F_T = F_Y$ 

 $F_D = F_Z$ 

Helicopter oriented athwartship:

 $F_L = F_Y$ 

 $F_T = F_X$ 

 $F_D = F_Z$ 

#### Wind Loads

The wind force is a concentrated load applied at the center of pressure, in the transverse direction of the helicopter. Calculate the concentrated load by multiplying a uniform pressure by the sail area of the helicopter. The sea state determines which pressure and sail area to use. For storm seas, the pressure is 15 pounds per square foot; moderate seas, 7.5 pounds per square foot. There are two sail areas provided by the manufacturer, folded and unfolded. The sail area is the exposed surface area of the helicopter. A folded sail area is when the rotors are turned and the horizontal stabilizer panels raised. The helicopter is folded for storm seas and storage in hangar. Therefore, use the folded area for storm seas and the unfolded for moderate. When the helicopter is in the hangar, no wind load applies. Also, note that the folded sail area can be larger than the unfolded; more area is exposed to the wind pressure.

$F_{\mathbf{W}}$	wind force (kip)
$a_{s}$	sail area of the helicopter (ft²)

#### Wind Loads

Storm seas:

 $F_W = 0.015a_s$ 

Moderate seas:

 $F_w = 0.0075a_s$ 

#### **Tiedowns**

Once on the ship the helicopter is chocked and chained to prevent sliding and overturning. The chocks and chains act as restraining forces helping to reduce the gear reaction values. These retraining forces are simplified into one equivalent force applied to on the windward side of the helicopter, called the tiedown force. The tiedown force equation is discussed further in the Gear Reaction section. The manufacturer provides the equivalent location data,  $Z_T$  and  $Y_T$ , and angle,  $\Omega$ , for storm and moderate seas. Tiedowns are only effective when an overturning moment acts on the helicopter. Larger gear reactions result from a slacked tiedown, i.e. a tiedown with no applied force.


Equivalent tiedown locations differ for storm and moderate seas. NAVAIR Technical Manual, Aircraft Securing and Handling describes four types of configurations, initial, intermediate, permanent, and heavy weather. These configurations depend on the operation status and sea conditions. Four chains are used for initial tiedowns, and are required up to the time of any helicopter movement, immediately after parking, or after recovery. Intermediate tiedowns include six chains, which are required for flight quarters when the helicopter may be moved. When not at flight quarters, permanent tiedowns of 12 chains are required. Heavy weather tiedowns of 18 chains are applied at the direction of the Aircraft Handling Officer.

#### **Gear Reactions**

A typical helicopter has three wheeled gears: two main gears and an auxiliary gear (Figures 1 and 2). Longitudinal ship motion loads cause uneven distribution between the main and auxiliary gear reactions. The wind, tiedown, and transverse ship motion loads cause uneven distribution between the two main gear reactions.

Determine the gear reactions as follows:

- 1. Use the longitudinal free body diagram of the helicopter to balance the loading between the main and auxiliary gears,  $R_M$  and  $R_A$  (Figure 1).
- Use the transverse free body diagram to balance the loading between the two main gears,  $R_1$  and  $R_2$  and the tiedowns (Figure 2).

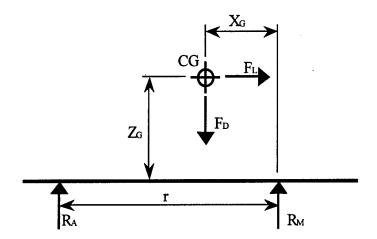

CG	center of gravity of helicopter
r	distance between auxiliary and main gears (in)
$R_A$	auxiliary gear reaction (kip)
R <sub>M</sub>	total main gear reaction (kip)
$X_{G}$	distance from main gear to CG (in)
$Z_{G}$	vertical distance to CG (in)

Figure 1: Longitudinal Free-Body Diagram of Helicopter

Maximum main gear reaction, R<sub>M</sub>, from moment equilibrium about auxiliary gear:

$$R_M = F_D \left( 1 - \frac{X_G}{r} \right) + F_L \left( \frac{Z_G}{r} \right)$$

Maximum auxiliary gear reaction, RA, from moment equilibrium about main gear:

$$R_A = F_D \left( \frac{X_G}{r} \right) + F_L \left( \frac{Z_G}{r} \right)$$


The two values calculated do not occur simultaneously. The larger reaction is used in the subsequent analysis. To insure equilibrium the following equations are used to calculate the other non-critical gear reaction.

When the main gear is larger, determine the auxiliary gear reaction from force equilibrium:

$$R_A = F_D - R_M$$

When the auxiliary gear is larger, determine the main gear reaction from force equilibrium:

$$R_{\scriptscriptstyle M} = F_{\scriptscriptstyle D} - R_{\scriptscriptstyle A}$$

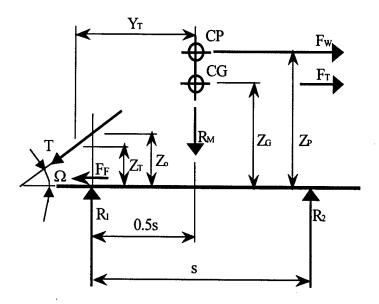

CP	center of pressure on helicopter
$F_{F}$	friction force (kip)
R <sub>1,2</sub>	main gear reactions (kip)
S	main gear spacing (in)
T	tiedown force (kip)
$Y_{T}$	distance from CP to tiedown location (in)
$Z_{P}$	vertical distance from deck to CP (in)
Z <sub>o</sub>	vertical distance of tiedown lever arm (in)
$Z_{T}$	vertical distance from deck to tiedown location (in)
Ω	tiedown angle (deg)

Figure 2: Transverse Free-Body Diagram of Helicopter

Next using Figure 2, to simplify calculations, resolve the tiedown location data into an equivalent tiedown lever arm,  $Z_0$ . This lever arm is directly above the main gear reaction  $R_1$ , which allows the vertical tiedown component to be neglected for moment summations about  $R_1$ .

$$Z_o = Z_T + \left(Y_T - \frac{s}{2}\right) \tan \Omega$$

After calculating the reactions for the main and auxiliary gears, calculate the overturning moment, M. If the helicopter has a positive overturning moment, then the tiedown force applies. If the overturning force is negative then the tiedown force is not effective. After calculating M, compute the two main gear reactions, which are different for the two conditions of  $M \le 0$  and M > 0.

### Helicopter Overturning Moment, M:

$$M = F_W Z_P + F_T Z_G - R_M \frac{s}{2}$$

#### No Overturning Moment, $M \leq 0$

If  $M \le 0$ , then the tiedown is not loaded, T = 0; and the helicopter is not being overturned.

Main gear reaction, R<sub>2</sub>:

$$R_2 = \frac{R_M}{2} + \frac{F_W Z_P}{s} + \frac{F_T Z_G}{s}$$

Main gear reaction, R<sub>1</sub>:

$$R_1 = R_M - R_2$$

#### Positive Overturning Moment, M > 0

If M > 0, then the tiedown is loaded and preventing the helicopter from being overturned.

Note, the tiedown force T has a horizontal component. In order to prevent the tiedown force from being over predicted and the gear reaction under predicted, an estimate of the tire friction force  $F_F$  is included. The resulting system has more unknowns than equations. Therefore, the gear reaction  $R_1$  is assumed to equal the static gear load. The static gear load is a portion of the helicopter load at parking weight with no ship motion loads applied. This assumption is reasonable because the tiedown chains are applied manually without preloading, i.e. compressing the gear beyond the static gear load. Otherwise, if the applied chain did compress the gear, then it would be impossible to remove the chains manually.

Main gear reaction,  $R_1$ , static gear load:

$$R_1 = \frac{W_p}{2} \left( 1 - \frac{X_G}{r} \right)$$

Friction force, F<sub>F</sub>: <sup>1</sup>

$$F_{F} = \frac{\frac{R_{M}}{2} - R_{1} + F_{W} \left( \tan \Omega - \frac{Z_{P} - Z_{o}}{s} \right) + F_{T} \left( \tan \Omega - \frac{Z_{G} - Z_{o}}{s} \right)}{\tan \Omega + \frac{Z_{o}}{s}}$$

Main gear reaction, R<sub>2</sub>:

 $<sup>^{1}</sup>$  The DDS 130 – 2 (NAVSEA, 1984) equation for  $F_{F}$  is incorrect, and has been corrected here.

$$R_{2} = \frac{R_{M}}{2} + \frac{F_{W}(Z_{P} - Z_{o})}{s} + \frac{F_{T}(Z_{G} - Z_{o})}{s} + \frac{F_{F}Z_{o}}{s}$$

Tiedown force, T:

$$T = \frac{F_W + F_T - F_F}{\cos \Omega}$$

The critical gear load will generally be the main gear reaction  $R_2$ . However, it is possible for  $R_A$  to govern, therefore, in the subsequent calculations use the larger value reaction.

## Variation in Loading due to the Recovery Assist, Securing, and Traversing (RAST) System

The system has a small effect on the gear reactions. The RAST system does not increase the calculated landing reactions. However, a vertical restraint on the helicopter by the system decreases the parking reactions. Parking in this context is the time between landing and take off.

#### **Landing Loads**

The RAST system itself tends to increase the landing loads, due to the cable haul down tension. However, landing loads do not exceed the nominal landing load,  $R_L$ , which the helicopter manufacturer provides. Therefore, there is no variation in landing load calculations for the RAST system.

#### Parking Loads

The parking condition includes the securing, traversing, and storage of the helicopter for ships with RAST systems. The probe holds the helicopter to the deck to resist the longitudinal ship motion force,  $F_L$ , the transverse ship motion force,  $F_T$ , and the wind force  $F_W$ . The probe acts as a vertical tiedown,  $F_P$ , applied at the centerline of the helicopter. Calculate the resulting gear reactions as follows: (Figures 1&3)

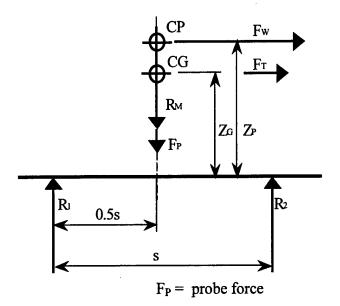


Figure 3: Transverse Free-Body Diagram of Helicopter for RAST System

Maximum total main gear reaction, R<sub>M</sub>, vertical force equilibrium:

$$R_M = F_D \left( 1 - \frac{X_G}{r} \right)$$

Maximum auxiliary gear reaction, RA, vertical force equilibrium:

$$R_A = \frac{F_D X_G}{r}$$

Helicopter overturning moment, M:

$$M = F_W Z_P + F_T Z_G - \frac{R_M s}{2}$$

The same applies for the probe force  $F_P$  as for the tiedown force. If the helicopter has a positive overturning moment, then the probe force applies. If the overturning force is negative then the probe force is not effective. After calculating M, compute the two main gear reactions, which are different for the two conditions of  $M \le 0$  and M > 0.

## No Overturning Moment, $M \le 0$

If  $M \le 0$ , then there is no probe force applied to the system,  $F_P = 0$ 

Main gear reaction, R<sub>2</sub>:

$$R_2 = \frac{R_M}{2} + \frac{F_W Z_P}{s} + \frac{F_T Z_G}{s}$$

Main gear reaction, R<sub>1</sub>:

$$R_1 = R_M - R_2$$

## Positive Overturning Moment, M > 0

If M > 0, then the probe force is applied to the system.

Main gear reaction, R<sub>1</sub>:

$$R_1 = \frac{W_P}{2} \left( 1 - \frac{X_G}{r} \right)$$

Probe force, F<sub>P</sub>:

$$F_{P} = 2R_{1} + \frac{2F_{T}Z_{G}}{s} + \frac{2F_{W}Z_{P}}{s} - R_{M}$$

Main gear reaction, R<sub>2</sub>:

$$R_2 = \frac{R_M}{2} + \frac{F_P}{2} + \frac{F_T Z_G}{s} + \frac{F_W Z_P}{s}$$

# Structural Framing of Flight Decks and Handling Areas

The structural framing of the flight deck and handling area on a US Navy ship is a continuously welded plate deck grillage. A flat plate is supported by multi-span stiffeners. Beams, girders, and/or bulkheads support the stiffeners at uniform positions. The framing is a grid system, so the deck plate acts as the top flange for the stiffeners, beams, and the girders. Thus, the deck structure is a statically indeterminate system. To account for the interaction effect of the members, the structural parameters of each member are adjusted by several coefficients. Each parameter is discussed in the Structural Analysis section.

The analysis methodology is valid only for plate-deck structures with plating less than one inch thick and flexible stiffener supports for longitudinally or transversely framed decks. Decks not meeting these criteria must be analyzed with the finite element method.

Generally, combatants are longitudinally stiffened; some auxiliaries are transversely stiffened. The supporting members perpendicular to the stiffeners are referred to as beams in this analysis. The following types of drawings are needed: inboard profile, compartment and access of the flight deck and hangar area, and the structural plan view for the flight deck and hangar area. Figures 4-8 are examples of the types of drawings required for the analysis. The example drawings shown are of the DDG 51 Class (NAVSEA, 1985).

Figure 4: Inboard Profile of the ship's stern

Figure 5: Compartment and Access of the flight deck and hangar area

Figure 6-8: Structural Plans of the DDG 51 Class Main Deck

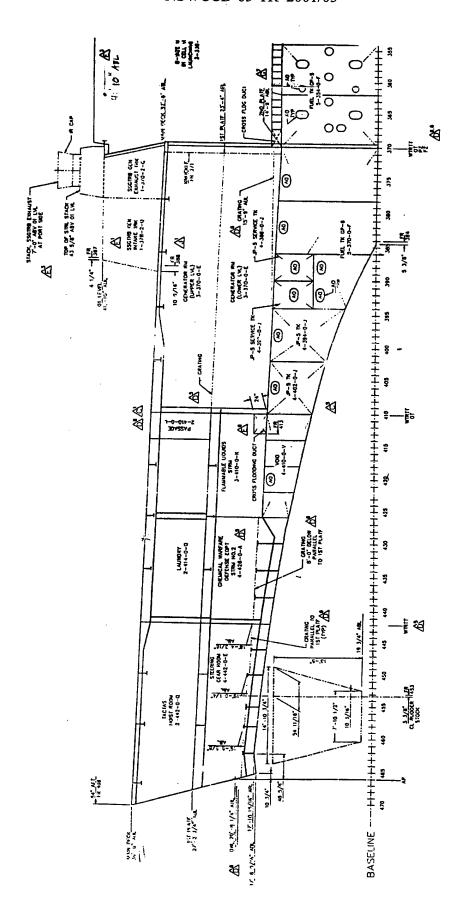


Figure 4. Inboard Profile Stern of Ship - NAVSEA Drawing 101-6219378

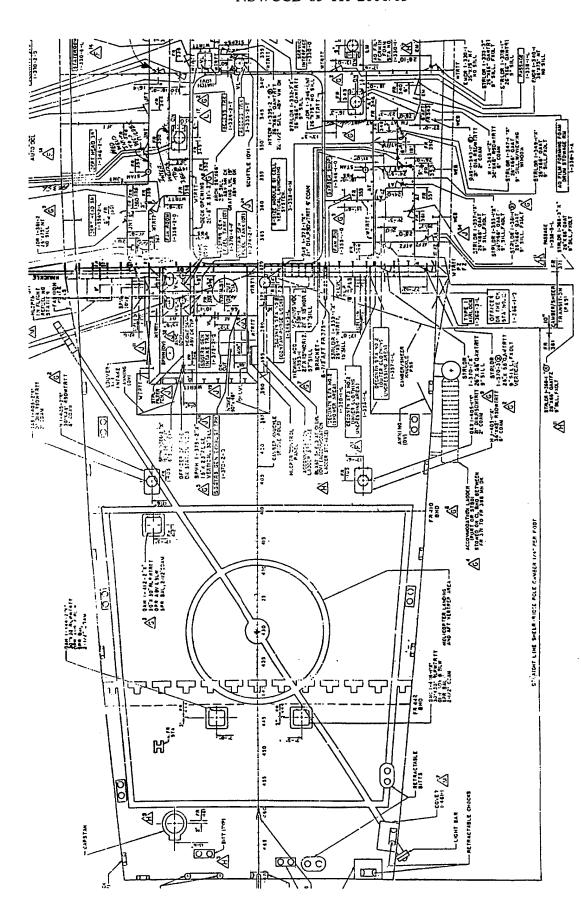


Figure 5. Compartment and Access of Handling Area, NAVSEA Drawing 101-6218623

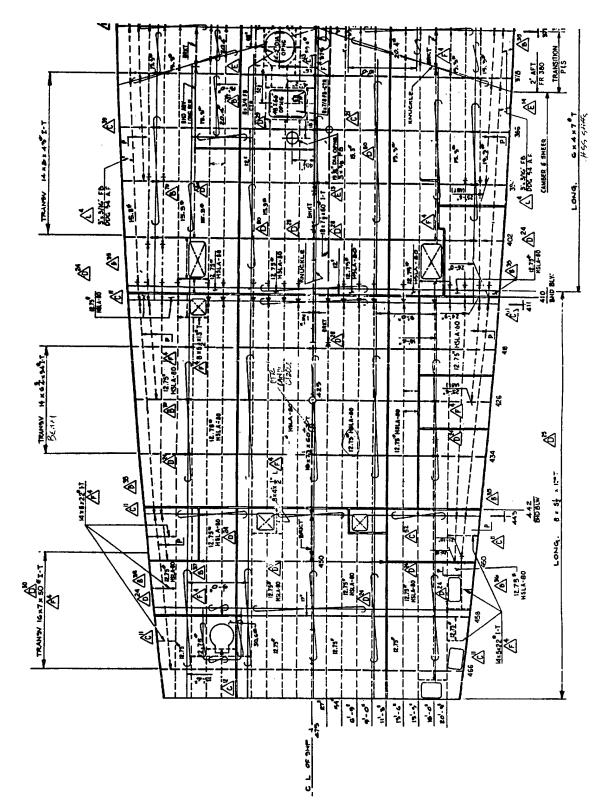


Figure 6. Structural Scantling Plan Stern to Frame 378, NAVSEA Drawing 100-6218844

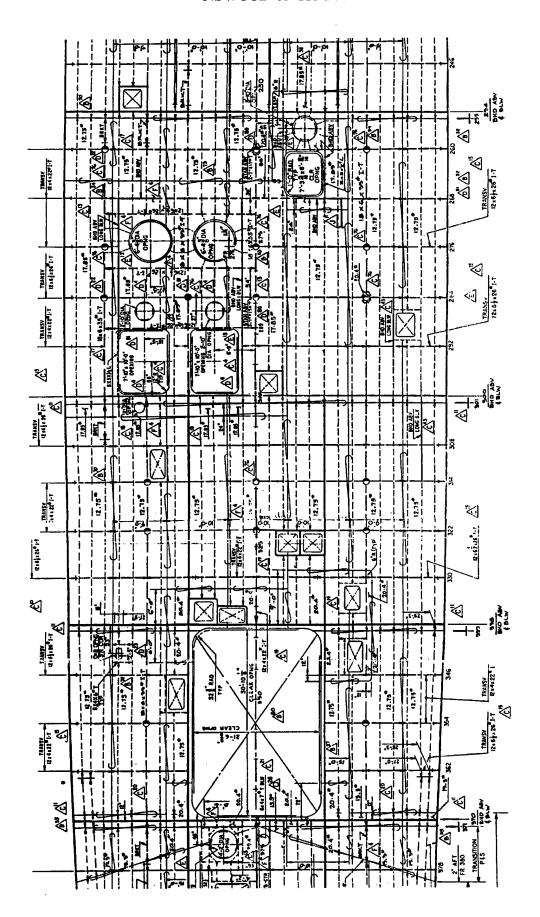


Figure 7. Structural Scantling Plan Frame 378 to Frame 246, NAVSEA Drawing 100-6218844

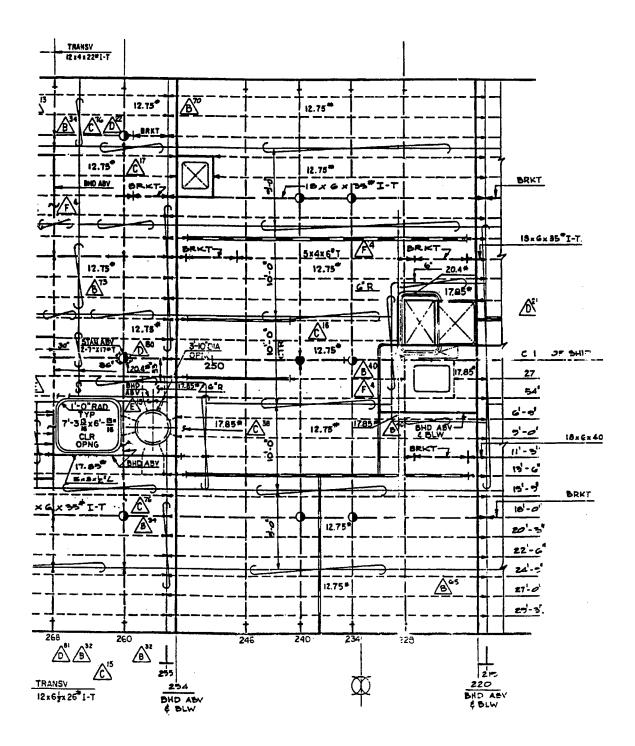


Figure 8. Structural Scantling Plan Frame 246 to Frame 220, NAVSEA Drawing 100-6218844

## **Design Criteria**

For each material type used in ship construction, the ship specification will list its yield stress,  $F_y$ , and its maximum allowable working stress,  $F_b$  (sometimes referred to as  $F_{all}$ ). These strength criteria can be found in *General Specifications for Ships of the U.S. Navy* Section 100 or in Section 9110-0 for older ships (NAVSEA).

The following analysis procedure considers the strength of the plating, stiffener bending, and stiffener shear separately. Each has separate strength criteria and parameters, which are applied in the analysis. The stress analysis is only performed on the plating and stiffeners. Since it has the smaller section properties only the stiffener is analyzed. If the stiffener passes, then logically the heavier transverse beam will also pass. If the stiffener fails, then there would be no need to check the transverse beam. Therefore, the supporting beams, girders, stanchions, and/or bulkheads are not analyzed specifically in this procedure.

## **Plating Strength**

The allowable stress levels for the plating depend upon the loading condition, the sea condition, and the probability of occurrence. The calculated plating stress,  $f_P$ , must be less than or equal to the designated allowable stress level for each condition, as follows:

During storm seas, severe ship motions are assumed for parking loads, but these loads are infrequent. The deck plating allowable stress level for storm sea parking can be taken as the welded yield strength of the material,  $F_Y$ .

 $f_P(\sigma \text{ calculated}) \leq F_Y(\text{yield stress})$ 

For landing and moderate sea parking, which are the most common and frequent loads, the allowable stress level for plating is the allowable working stress of the material,  $F_b$ .

 $f_P$  ( $\sigma$  calculated)  $\leq F_b$  (allowable working stress)

For ships using a RAST system, the allowable plating stress is the allowable working stress of the material, F<sub>b</sub>. This applies to both longitudinal and athwartship loading and both sea conditions.

 $f_P$  ( $\sigma$  calculated)  $\leq F_b$  (allowable working stress)

## Stiffener Bending Strength

The allowable bending stress level for the stiffeners is the allowable working strength of the material. The calculated bending stress in the stiffener,  $f_{SB}$ , must be less than or equal to this.

 $f_{SB}$  ( $\sigma$  calculated)  $\leq F_b$  (allowable working stress)

## Stiffener Shear Strength

The allowable shear stress level for the stiffeners is sixty percent of the allowable working strength of the material. The calculated shear stress in the stiffener,  $f_{SV}$ , must be less than or equal to this.

 $f_{SV}$  ( $\sigma$  calculated)  $\leq 0.6 \text{ x F}_b$  (60% of the allowable working stress)

## Wheel Load Distribution

## **General Description of Tire Load Distribution**

The loads applied to the flight deck structure are the calculated gear reactions for the landing and parking load conditions. How these reactions are then applies to the deck depends on the tire footprint size and the orientation of the aircraft to the ship. The load distributes uniformly over the estimated contact area between the tire and the deck. The contact area or tire footprint size is interpolated from a table provided by the helicopter manufacturer. The table values include load magnitude and tire characteristic effects. The tire characteristic parameters include the number of wheels per gear, the actual physical tire size, the type of tire, and tire pressure. How the load applies and distributes to the structure also depends on the aircraft orientation with respect to the ship structure.

## **Tire Footprint Size**

Tire contact area depends on the gear load R, the number of wheels per gear, and the physical tire properties. Calculate the tire load  $P_T$  by dividing the gear load R by the number of wheels per gear. The tire load  $P_T$  calculation is used only for the footprint size.


#### Single wheeled gear:

 $P_T = R$ 

#### Dual wheeled gear:

$$P_T = \frac{1}{2} R$$

The footprint size determined from  $P_T$  is a rectangular area of uniform pressure, with length A and width B (Figure 9). The manufacturer combines the tire characteristics and presents the load varying dimensions in a footprint-loading table (see below). Dimensions A and B can be linearly interpolated from this table.

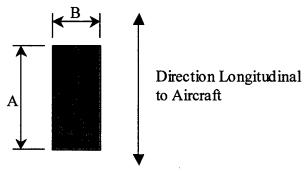

**Figure 9: Tire Footprint** 

**Table 2: Tire Footprint Load Table** 

P <sub>T</sub>	A	В
P <sub>T1</sub>	$A_1$	$B_1$
P <sub>T2</sub>	$A_2$	- B <sub>2</sub>

Calculate the footprint dimensions with the following equations:

$$A = A_1 + \left(\frac{A_2 - A_1}{P_{T2} - P_{T1}}\right) (P_T - P_{T1})$$

$$B = B_1 + \left(\frac{B_2 - B_1}{P_{T2} - P_{T1}}\right) (P_T - P_{T1})$$

The manufacturer also provides a tire-bottoming load,  $P_b$ . When the tire load  $P_T$  reaches the bottoming load,  $P_b$ , the footprint flattens to the maximum dimensions A and B. At loads greater than and equal to  $P_b$ , the footprint dimensions A and B are equal to the maximum dimensions at tire bottoming. Numerically stated:

If 
$$P_T \ge P_b$$
, then  $A = A(P_b)$  and  $B = B(P_b)$ 

The following example shows how to determine the tire footprint dimensions A and B graphically.

#### **Example:**

 $P_{b} = 11.0 \text{ kips}$ 

**Table 3: Provided Tire Footprint Load Data** 

P <sub>T</sub>	A	В
5	6	4.5
9	8	5

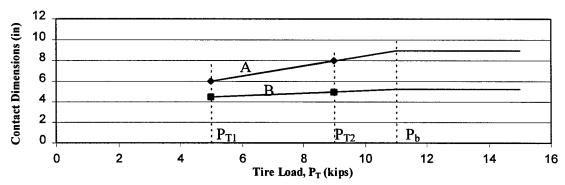


Figure 10: Graphical Illustration of Tire Load

## Loading Variations due to Orientation

How the tire loads apply to the structure, depend on the orientation of the aircraft with respect to the ship's structure. After calculating the footprint dimensions A and B, orient the dimensions with respect to the structural framing. Tire footprint dimensions are reoriented to patch load dimensions (Figures 11-14). Patch load dimensions are with respect to the stiffeners.

A	length of tire footprint (in)
A'	length of tire parallel to the stiffeners (in)
В	width of tire footprint (in)
B'	width of tire perpendicular to the stiffeners (in)
С	dual wheel spacing, center to center <sup>2</sup> (in)

The gear load reaction R modifies to a patch load, P. If the gear is aligned with the stiffeners, then the patch load P is equal to the gear load reaction R divided by the number of wheels per gear. If the gear is perpendicular to the stiffeners, then the patch load will equal the gear reaction, R.

Aircraft aligned parallel with the stiffeners:

$$A' = A$$
$$B' = B$$

For a single wheeled gear, Condition A (Figure 11)

$$P = R = P_T$$

For a dual wheeled gear, Condition B (Figure 12)

$$P = \frac{1}{2} R = P_T$$

Aircraft aligned perpendicular to the stiffeners:

$$B' = A$$
  
 $P = R$ 

For a single wheeled gear, Condition C (Figure 13)

$$A' = B$$
$$P = R = P_T$$

For a dual wheeled gear, Condition D (Figure 14)

$$A' = c + B$$
$$P = R = 2 P_{T}$$

In the dual wheel perpendicular case (Condition D), the patch load, P, does not equal the tire load  $P_T$  because both wheels are sitting on the stiffener and causing a combined loading. The patch load, P, is therefore equal to the total gear reaction, R, acting over the total length c + B.

<sup>&</sup>lt;sup>2</sup> The annotation 'c' is a simplified notation for the DDS 130-2 notation of b': the center-to-center dual tire spacing and b": the center-to-center dual patch spacing.

<sup>&</sup>lt;sup>3</sup> This is a very close approximation for maximum loading in the center of the panel for the plating stress calculation.

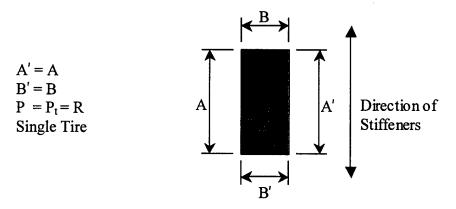


Figure 11: Patch Load Dimensions, Condition A

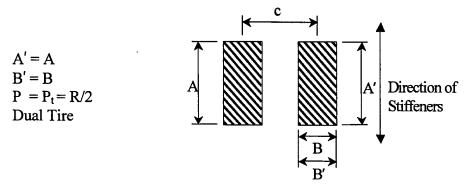


Figure 12: Patch Load Dimensions, Condition B


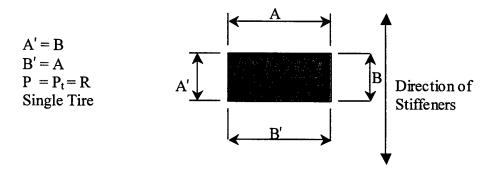


Figure 13: Patch Load Dimensions, Condition C

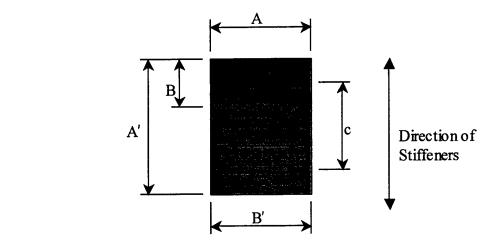

A' = B + cB' = A

 $P_t = R/2$  P = R

**Dual Tire** 

Figure 14: Patch Load Dimensions, Condition D

# **Structural Analysis**

The deck structure is an indeterminate structure with continuous welds. Therefore, to account for these effects several parameters and factors are used. The plating analysis incorporates localized plasticity, membrane effects, and makes use of simplified approximations for the elastic-plastic behavior. The longitudinal stiffener analysis incorporates the transverse beam flexibility effects and grillage effects. Based on strip theory the approach uses design curves and influence lines extensively. Only the governing load placement of the helicopter gears is used to determine the maximum stress in the deck plating and longitudinal stiffeners.

Since, the stiffener has smaller section properties than the beam, perform the stress analysis on only the stiffener and plate. If the stiffener passes, then logically the heavier transverse beam also passes. The supporting beams, girders, stanchions, and/or bulkheads are not analyzed specifically in this procedure, but should be checked.

### **Structural Parameters**

The structural parameters affecting the analysis include member and geometric characteristics. The member properties for the stiffener and beam take into account an effective width of the deck plate. The analysis assumes a uniform grillage arrangement, in which the supports are equally spaced and the members are uniformly sized. If this is not the case for the structure, it is recommended that a finite element analysis be performed.


The properties of the stiffeners, beams, and girders are those of the actual member itself plus the effective width of the deck plating. The deck plating acts as the upper flange. The effective breath of the deck plating,  $b_e$ , is the minimum value of the following relationships: plate thickness t and material properties, one third the span length  $L_s$ , or stiffener spacing b.

$$b_e = \begin{cases} 2t\sqrt{\frac{E}{F_y}} \\ \frac{1}{3}L_s \\ b \end{cases}, \text{ minimum value}$$

The combined properties of the member and associated plating can be determined by hand calculation or from standard combined stiffener and plate property table listings, see *Properties of Steel Shapes, and Plate – Beam Combinations used in Shipbuilding* (NAVSEA). Figure 15 defines graphically the annotation of the section dimensions. The following section properties are required for the analysis:

Area	area of stiffener or beam (in²)
As	shear area of stiffener or beam (in²)
b	stiffener spacing (in)
Is	stiffener moment of inertia (in <sup>4</sup> )
Ī <sub>b</sub>	beam moment of inertia (in <sup>4</sup> )
$L_{s}$	length of a stiffener span (in)
$L_b$	length of a beam span (in)
n	number of spans between vertically rigid ship
11	components (bulkheads, sideshell, etc.)
$SM_{min}$	minimum section modulus (in <sup>3</sup> )
Ws	weight per foot of the stiffener (lb/ft)
$w_b$	weight per foot of the beam (lb/ft)
$\mathbf{w}_{p}$	weight per foot of the plating (lb/ft)

The minimum section modulus is normally the section modulus to the flange.

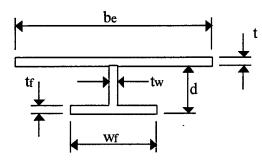

b <sub>e</sub>	effective width of plating (in)
d	depth of stiffener (in)
t	thickness of deck plating (in)
t <sub>f</sub>	thickness of flange (in)
t <sub>w</sub>	thickness of web (in)
$\mathbf{w_f}$	width of bottom flange (in)

Figure 15: Combined Stiffener and Plate Section

This procedure is applicable to longitudinally and transversely framed decks. Note that the term "stiffener" refers to the smallest structural stiffener in the deck, usually the longitudinal. "Beams" support the stiffeners and normally span transversely. "Girders" are very deep members.

It is important to remember the method presented here assumes a uniform grillage arrangement and the stiffeners are assumed to be continuous, uniform-size beams. The spacing of the stiffeners and their supports are also assumed to be consistent. This procedure is applicable to longitudinally and transversely framed decks. When the structure of the deck does not meet these characteristics, then perform a finite element analysis of the deck using any commercially accepted finite element program. See the section Finite Element Modeling for modeling suggestions.

## **Primary Stress**

Primary stress,  $\sigma_{PR}$ , is the maximum resulting stress on the ship structure due to the largest possible global bending of the ship hull from wave action. This stress only applies to strength decks, those decks contributing to the hull strength. In plating and stiffener design, add the primary stress to the longitudinal stress component of the member. Section 100 of the ship specifications lists the primary stress and explains how this stress distributes along the ship length. For each location analyzed the primary stress at that location must be determined, including locations on non-strength decks. The percentage of primary stress values at different loading conditions for strength decks are as shown in Table 4.

Loading Condition	Percent of Design Primary			
Storm Sea Parking	100			
Moderate Sea Parking	50			
Landing	0			

## **Deck Plating Analysis**

The plating analysis is a simplified approach to the elastic-plastic behavior theory. The procedure uses the elastic-plastic behavior of the plating by taking advantage of the reserve energy absorption capability of the plate deck structure over that determined by the first order flexural theory. Based on Navy experience, permanent set is allowed to a degree. The parameters and strength values were empirically developed. *Design of Deck Structures under Wheel Loads* discusses their development (RINA, 1980). The load applied to the plating panel is the patch load, P, determined in "Wheel Load Distribution." The maximum stress condition is when the patch load is applied to the center of the plating panel. Furthermore, the maximum stress is in the direction of the plate's transverse or shorter dimension. Stiffeners and beams support the plating on all sides.

First, determine the non-dimensionalized plate bending moment,  $C_1$ , by the following equations. This parameter serves to quantify the plating bending moment as a function of the patch load size in relation to the stiffener spacing, b. Since the plating stress is always greater in the direction of the shorter span, the stiffener spacing, b, is the non-dimensionalizing parameter.

$$C_1 = \frac{0.25 - 0.125 \left(\frac{B'}{b}\right)}{0.94 + 0.45 \left(\frac{A'}{b}\right)} - \frac{0.079 - 0.026 \left(\frac{B'}{b}\right)^2}{1.75 + 0.15 \left(\frac{A'}{b}\right)^2}, \text{ when } \frac{A'}{b} \le 0.5$$

$$C_1 = \frac{0.25 - 0.125 \left(\frac{B'}{b}\right)}{\frac{A'}{b} + \frac{0.6}{\frac{A'}{b} + 0.4}} - \frac{0.079 - 0.026 \left(\frac{B'}{b}\right)^2}{1.75 + 0.15 \left(\frac{A'}{b}\right)^2}, \text{ when } \frac{A'}{b} > 0.5$$

Determine the ratios B'/b and c/b, then the dual patch equivalent load factor for plating,  $\Psi$ , from Figure 16. Note that for single patches  $\Psi = 1.0$ 

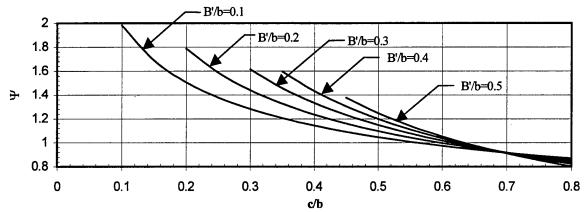


Figure 16: Dual Patch Equivalent Load Factor for Plating

A deck function coefficient,  $C_o$ , provides a relationship between allowable permanent set, load probability, and deck function. Deck function describes the deck's contribution to the hull girder strength and the type of aircraft operations performed. This parameter developed by NAVSEA uses empirical data based on Fleet observations. The  $C_o$  factor lowers the plating stress to an artificial value, which effectively allows permanent set. Table 5 lists the deck function  $C_o$  for particular sea conditions and deck strengths. Helicopter operations are considered low-speed handling. The uppermost strength deck is the ship's weather deck.

Table 5: Deck Function, Co, for Steel or Aluminum

Deck Function	Landing and Moderate Sea Parking	Storm Sea Parking	
Uppermost strength deck high speed rolling of aircraft	2.0	1.7	
Uppermost strength deck low speed handling of aircraft	3.4	2.8	
Non-uppermost strength deck high speed rolling of aircraft	3.4	2.8	
Non-uppermost strength deck low speed handling of aircraft	4.2	3.5	

The maximum bending stress is then:

$$f_p = \frac{6C_1 P \Psi}{C_o t^2},$$

where

P	patch load (kips)
t	plating thickness (in)

If the maximum stress in the plate is in its transverse direction for a longitudinally stiffened deck, the primary stress is not included. However, for transversely stiffened decks subject to parking loads, the appropriate primary stress is combined with the calculated plating stress for parking loads.

Determine the required plating thickness,  $t_{req'd}$  by the following equation:

$$t_{req'd} = \sqrt{\frac{6C_1 P\Psi}{C_o f_P}},$$

where  $f_P$  is the allowable plating stress for the various conditions defined in the "Design Criteria" section for plating strength.

## Stiffener Analysis

The stiffener analysis incorporates grillage effects. For regular structural scantlings, the procedure is based on strip theory and the use of influence lines. Acting as continuous members, the beams elastically support the stiffeners, carry the load to the supports, and deflect proportionally. This procedure is applicable to both longitudinal and transverse framing. Furthermore, this analysis determines the maximum bending moment and shear in a stiffener for a single-patch or a dual-patch loading. The procedure, strength values, and parameters are based on *Design Manual for Orthotropic Steel Plate Deck Bridges* (AISC, 1963).

### **Effective Span Lengths**

The stiffeners and beams are designed as continuous span members. The effective span length factor,  $e_s$  or  $e_b$ , is a function of the number of spans the member extends between vertically rigid ship components, such as bulkheads or the side shell. The calculation of vertical relative rigidity between plating and stiffener and between stiffener and beam uses these factors.

 $e_s$  = effective span length factor of the stiffener

 $e_b$  = effective span length factor of the beam

Table 6 lists the effective span length factors.

**Table 6: Effective Span Factor** 

Number of spans	e <sub>s</sub> or e <sub>b</sub>
1	1.0
2	0.842
3	0.700
4	0.692
5 or more	0.684

### **Maximum Stiffener Bending Moment and Stress**

When the patch load is applied directly on the stiffener at the mid-span, the maximum stiffener bending stress occurs. The maximum moment is the summation of: (1) the live load moment,  $M_o$ , which assumes rigid end supports, (2) the added moment due to flexibility of the beam supports,  $M_C$ , and (3) the moment due to the dead load,  $M_D$ . The load can be a single or dual patch load as determined in "Wheel Load Distribution." Several factors account for the structural member interaction and help distribute the load.

Apply the patch width load distribution factor,  $\phi_1$ , to account for the distribution effects of the patch width, B'. Calculate B'/b and use Figure 17 to determine  $\phi_1$ .


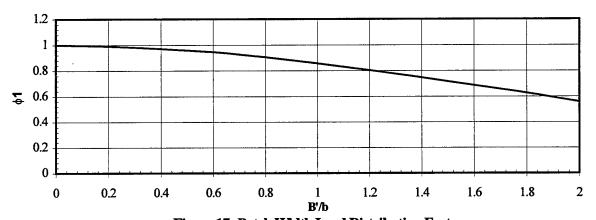


Figure 17: Patch Width Load Distribution Factor


To account for the distribution effects of the plating, use the plating load distribution factor,  $\phi_2$ . To determine  $\phi_2$  calculate the relative rigidity between the plating and the stiffener,  $\gamma_{PS}$ , then use Figure 18. The following equation calculates the relative rigidity,  $\gamma_{PS}$ :

$$\gamma_{PS} = \frac{(e_s L_s)^4 t^3}{3.49 b^3 \pi^4 I_s}$$

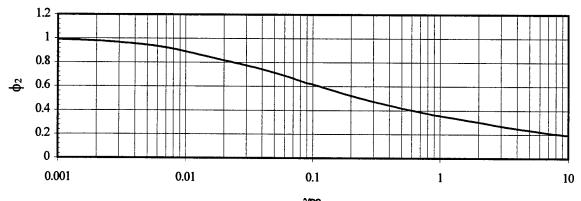

γPS Figure 18: Plating Load Distribution Factor

To account for the combined effects of dual patches, use the dual patch equivalent load factor,  $\phi_3$ . To determine  $\phi_3$  calculate c/b and use Figure 19. For a single patch:  $\phi_3 = 1.0$ .

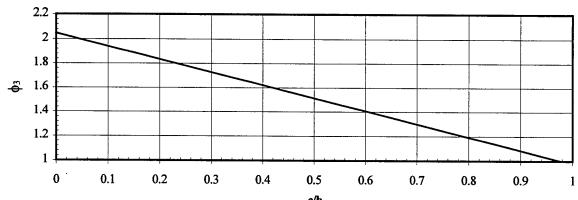

Figue 19: Dual Patch Equivalent Load Factor for Stiffeners

The moment due to the live load over the rigid supports,  $M_o$ , is determined by using an influence line coefficient and then by applying the appropriate load factors. The influence line coefficient  $(M_o/PL_s)$  is for a moment at the mid-span of a continuous beam over equally spaced rigid supports with a patch load at the middle mid-span.

$$\frac{M_o}{PL_S} = 0.1708 - 0.125 \left(\frac{A'}{L_S}\right) + 0.0264 \left(\frac{A'}{L_S}\right)^2$$

Calculate the moment due to the live load over rigid supports, M<sub>o</sub>, by applying the appropriate load factors to the influence line coefficient, using the following equation:


$$M_o = \left(\frac{M_o}{PL_S}\right) PL_S \phi_1 \phi_2 \phi_3$$

Since  $M_0$  represents the live load moment for fixed-end supports, the total live load moment is determined by adding an additional moment due to the flexibility of the beam supports  $M_C$ . If bulkheads are supporting stiffeners in lieu of beams, then the stiffener supports are rigid; then,  $M_C = 0$ .

Calculate the relative rigidity between the stiffener and beam,  $\gamma_{SB}$ , by the following equation:

$$\gamma_{SB} = \frac{(e_B L_B)^4 I_S}{0.684 b (e_S L_S)^3 \pi^4 I_B}$$

The moment correction coefficient due to flexure of the beams,  $(M_C/RL_s)$ , is obtained from Figure 20 using the relative rigidity,  $\gamma_{SB}$ .

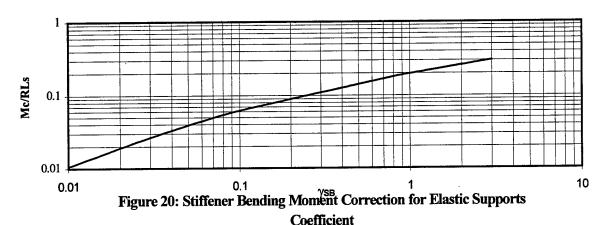

To account for the multiple gears, plating, and stiffener load distributions, assume a Fourier series component representation of the load on the transverse beam. This determines the moment in the stiffeners due to the beam flexure. The representation consists of a characteristic loading and a shape function.

R <sub>o</sub>	beam characteristic load (kips/in)
Bo	characteristic load width (inch)
ф4	beam loading coefficient

Based on the total gear load, the beam characteristic load,  $R_{\text{o}}$ , is as follows:

$$R_o = \begin{cases} \frac{R}{B'} & \text{single patch} \\ \frac{R}{(c+B')} & \text{dual patch} \end{cases}$$

Based on the total gear distribution, the characteristic load width, Bo, is as follows:

$$B_o = \begin{cases} \frac{B'}{2} & \text{single patch} \\ \frac{1}{2} (c + B') & \text{dual patch} \end{cases}$$

Calculate the beam load coefficient,  $\phi_4$ , using one of the following equations, depending on the aircraft's orientation to the stiffeners.

$L_{B}$	beam span length (in)
S	distance between R <sub>1</sub> and R <sub>2</sub> of main gear (in)

For the helicopter aligned with the stiffeners and where:

$$L_B \ge 1.5s$$

The beam loading coefficient is:

$$\phi_4 = \frac{4}{\pi} \cos\left(\frac{\pi s}{2L_B}\right) \sin\left(\frac{\pi B_o}{L_B}\right) \left(1 + \cos\left(\frac{\pi s}{2L_B}\right)\right)$$

For the helicopter aligned perpendicular to the stiffeners, and for the aircraft aligned with the stiffeners where:

$$L_R < 1.5s$$

The beam loading coefficient is

$$\phi_4 = \frac{4}{\pi} \sin \left( \frac{\pi B_o}{L_B} \right)$$

Finally, the moment due to the flexibility of the beam supports,  $M_C$ , is calculated by applying the appropriate load factors to  $(M_C/RL_s)$  using the following equation:

$$M_C = \left(\frac{M_C}{RL_S}\right) R_O b L_S \phi_4$$

The moment due to the dead weight of the plating and the stiffener,  $M_D$ , is the mid-span moment of a single span beam with fixed supports under the distributed load of it self-weight. Calculate the distributed load due to the weight of the plating and stiffener,  $w_D$ , using the following equation:

$w_{\mathrm{D}}$	distributed load of the plating and stiffener weight (kips/inch)			
W <sub>s</sub>	weight of stiffener per foot (lbs/ft)			
Wp	weight of plating per square foot (lbs/ft²)			

$$w_D = \frac{w_s + \frac{w_p b}{12}}{12000}$$

The moment due to the dead weight of the plating and stiffener,  $M_D$ , is then calculated using the following equation:

$$M_D = \frac{\eta_z w_D L_S^2}{12}$$

where  $\eta_z$  is the downward ship motion factor as defined in "Loading."

The maximum bending moment in the stiffener, M<sub>S</sub>, is the sum of the moment components:

$$M_S = M_0 + M_C + M_D$$

Depending whether or not the deck is a strength deck, the bending stress depends on one of the following equations. Section 100 of the individual ship specifications describes which decks of the hull contribute to its strength (NAVSEA). If the primary stress calculated for a non-strength deck is high, then use the f<sub>SB</sub> equation for a strength deck.<sup>4</sup>

For landing or non-strength deck parking, calculate the bending stress f<sub>SB</sub> as follows.

$$f_{SB} = \frac{M_S}{SM_{MIN}}$$

If the helicopter is on a strength deck, the stiffener stress must include the appropriate primary stress. Therefore, for strength deck parking, calculate the stiffener stress using the following equation:

$$f_{SB} = \frac{M_S}{SM_{MIN}} + \sigma_{PR}$$

For those decks using a RAST system for operations in heavier seas, it may be appropriate to include the primary stress for the landing condition. Depending upon the sea state specified in the vessel's detailed specifications for the flight operations, use an interpolated value of the

<sup>&</sup>lt;sup>4</sup> This is a deviation from DDS 130-2, and is the result of discussions between NAVSEA, NSWCCD, and the original DDS authors.

primary stress. An estimate of the required section modulus,  $SM_{REQ'D}$ , results from the following equation:

$$SM_{REQ'D} = \frac{M_S}{(f_{SB} - \sigma_{PR})}$$

where  $f_{SB}$  is the allowable stiffener bending stress defined in the "Design Criteria" section for stiffener bending stress.

## **Maximum Stiffener Shear Force and Stress**

The maximum shear force loading condition occurs when the patch load is adjacent to the stiffener support directly over the stiffener. Maximum shear force is the summation of: (1) the shear due to the live load,  $V_0$ , assuming the stiffener is a continuous beam on rigid supports, and (2) the shear due to the dead weight of the plating and stiffener,  $V_D$ .

The load applied to the stiffener is a single or dual patch load of length A' (along the stiffener), width B' (perpendicular to the stiffener), magnitude P, and dual patch spacing b', as previously described.

To account for the distribution effects of the patch width, B', use the patch width load distribution factor,  $\phi_1$ . Use the dual patch equivalent load factor for stiffeners  $\phi_3$  to account for the combined effects of dual patches.

Determine the shear due to the live load over rigid supports,  $V_o$ , using the influence line coefficient  $(V_o/P)$  and the appropriate load factors. The influence line coefficient for the shear at the support of a continuous beam over equally spaced rigid supports for a patch load adjacent to the support is as follows:

$$\frac{Vo}{P} = 1 - 0.7321 \left(\frac{A'}{L_S}\right)^2 + 0.2990 \left(\frac{A'}{L_S}\right)^3$$

Calculate the shear V<sub>o</sub> due to the live load over rigid supports by applying the appropriate load factors to the influence line coefficient:

$$V_O = \left(\frac{V_O}{P}\right) P \phi_1 \phi_3$$

Calculate the shear  $V_D$  at the support of a single span beam due to the plating and stiffener self-weight  $w_D$ , as follows:

$$V_D = \frac{\eta_z w_D L_S}{2}$$

The maximum shear force in the stiffener, V<sub>S</sub>, is the sum of these two components.

$$V_S = V_o + V_D$$

Calculate the shear stress by the following:

$$f_{SV} = \frac{V_S}{A_S}$$

An estimate of the required shear area, A<sub>SREQ'D</sub>, is determined by:

$$A_{SREQ'D} = \frac{V_S}{f_{SV}}$$

where  $f_{SV}$  is the allowable shear stress defined in the "Design Criteria" section for stiffener shearing stress.

### Beams, Girders, and Stanchions

Beams, girders, and stanchions supporting the aircraft handling decks must be designed to withstand the maximum bending, shear or compressive stress induced by the aircraft gear loads or any other loading requirements of the deck. The allowable stress levels for the beams, girders, and stanchions are as per the design criteria in the ship specifications. This analysis procedure does not calculate the stresses in these members. However, consider the beams and girders, when performing the analysis.

To analyze the beams, either a frame analysis or the method described herein may be used. If a frame analysis is chosen, the procedure can be simplified. Due to the relatively large span of the beams and girders, the consider gear load as a concentrated load, regardless of whether the gear has single or dual wheels. It is essential that the most critical loading condition be determined, since the aircraft could be at almost any location on the deck. For both beams and girders, use any acceptable linear analysis method such as moment distribution. The outlined procedure developed for the stiffener is applicable for a beam analysis. The parameters and strength values also apply to the beams and/or girders. Simply, consider the members as the continuous stiffeners supported by larger members running perpendicular to the beam and/or girder. Nevertheless, chose the method based on the structural geometry and engineering discretion.

Stanchions provide intermediate support for the beams or girders where their spans would otherwise be excessive. Likewise, where bulkheads support the deck stiffeners, beams, or girders, the vertical stiffeners under the beams act as a column. Determine the maximum reaction into the stanchion or bulkhead support, then use DDS 100-4 to determine the adequacy and/or required size of the member (NAVSEA, 1982).

## **Analytical Tools**

### **Current Methods**

The computation of the helicopter handling deck analysis and design can be carried out in three ways. The first method is by doing hand calculations for the method presented here. However, two computer methods can be used, either a finite element model analysis or the Excel spreadsheet developed by NAVSEA and revised by NSWCCD. The Excel spreadsheet follows the procedure prescribed by DDS 130-2.

### Finite Element Modeling

Using any current finite element modeling (FEM) program, the analysis of a ship's handling deck can be accurately performed for deformations in the linear range. Determine the gear reactions and footprints using either the Excel spreadsheet or hand calculations. The finite element analysis (FEA) will not take into account permanent set allowed in the deck plating. This permanent set factor is not easily introduced into the FEM without using nonlinear analysis codes. Because the DDS 130-2 method allows permanent set, the FEA results for deck plating stress will not agree with the spreadsheet results. This is discussed in the "Recommendations" section.

### **Excel Spreadsheet**

To aid in the analysis of the ship handling decks, NAVSEA developed a spreadsheet to run through the procedure outlined in DDS 130-2. This spreadsheet was updated in September 2000 by the author at the Naval Surface Warfare Center, Carderock Division. This updated spreadsheet still follows the DDS 130-2 procedure.

In order to use the spreadsheet, the user will need the ship and helicopter data described in the DDS. Data sheets used for gathering the input are supplied in Appendices A and B. The required input is highlighted in the color blue on the spreadsheet. An example of the use of the spreadsheet using the CH-60S helicopter on the DDG 51 Class flight deck is given in Appendix C.

Once the data are entered into the program, the results are displayed at the bottom of the spreadsheet in a table. For each required loading condition, the table lists the maximum gear reaction, maximum patch load, largest calculated stresses, and resulting factors of safety. The resulting stress and corresponding factor of safety is computed for plating stress, stiffener bending stress, and stiffener shear stress. If the factor of safety is less than one, then that component fails certification. If the factor is greater than one, then the component passes. All three components for all the applicable loading conditions must pass in order for the ship to be certified without restrictions.

Note: the spreadsheet has a few caveats in its analysis.

- 1. The spreadsheet only considers the largest gear reaction in its subsequent analysis. It does not calculate the stresses resulting from the other gear reactions. It is advised to check the other gear reactions for the possibility of causing a greater stress on the members other than the 'critical' gear reaction.
- 2. The spreadsheet does not check a specific location; it only analyzes the locations where the maximum stress condition is produced. However, several of the factors and equations developed in this procedure are specific for the maximum stress locations and are not applicable for specific locations other than at the assumed locations. For example, stiffener bending stress is a maximum at the stiffener mid-span. If specific spot locations must be considered, a FEA should be performed.
- 3. If the calculated main gear load equals the auxiliary gear load exactly, the spreadsheet defaults and uses the main gear reaction for remaining calculations. Depending upon the tire characteristics, the main gear reaction may not produce the governing stress condition for the helicopter.
- 4. If one gear reaction is exactly half the reaction of the other gear reaction, then the spreadsheet incorrectly calculates the remaining parameters.
- 5. The spreadsheet does not consider helicopters with skids, only wheeled gears.

For the present effort, these caveats were not addressed, since a total overhaul of the spreadsheet logic would be required. Moreover, it was sufficient to check these parameters by inspection during the certification of the Navy's ships for the newest helicopters, SH-60R and CH-60S.

## **Conclusion**

Based upon past helicopter certifications, the method outlined by the DDS 130-2 is reliable. Most analysis cases are straight forward, and use of the DDS 130-2 procedure is adequate. For these cases, the NAVSEA spreadsheet provides the most efficient means to determine a ship's capability to operate with a specific helicopter. However, addition of the suggested revisions to the procedure would provide a more accurate and thorough analysis.

### Recommendations

The procedure outlined in DDS 130-2 was developed in 1984. Several changes to the procedure could be made to ensure a more accurate and thorough analysis. The recommended revisions have been broken down by part.

### Loading

Rolling of the ship is the only type of ship motion considered in the analysis. This motion causes the outboard main gear,  $R_2$ , to be much greater than the inboard main gear,  $R_1$ . This motion produces the greatest possible reaction. Such a reaction is suitable for a general analysis of the structure. However, if a structure requires a specific location to be analyzed or has varying members sizes, then reactions produced by other motion combinations should be computed and applied to the structure for analysis. For example, the inboard gear reaction  $R_1$  is higher when only pitch and heave are present.

#### Wheel Load Distribution

The DDS determines the critical gear reaction based on the gear load, not the footprint. It suggests that the critical gear should be based on both, however this is not implemented in the procedure. Furthermore, patch sizes and loading reactions should be determined for all of the helicopter gears, with the maximum stresses tabulated.

#### Structural Analysis

The analysis only considers the locations which would produce the maximum stresses. If a specific location must be analyzed, then this procedure is not applicable. The equations used by the DDS were derived for determining the stresses at specific locations producing the greatest stress. A set of generalized equations should be developed for any location.

The analysis also accounts for permanent set in the plating using a C<sub>o</sub> factor. However, no background is provided on how this factor was developed. Furthermore, the deck function coefficient decreases the calculated plating stress. When performing a finite element analysis, the stress values are not comparable to the spreadsheet values for

plating stress. This factor needs modified to increase the capacity of the plating allowable stress while leaving the imposed stress unmodified.

Analysis of the Navy cruisers recently revealed a high primary stress in the 02 level. According to the DDS, primary stress need not be added to the stresses induced by helicopter wheel loads on a non-strength deck. However, discussions with NAVSEA and the DDS authors confirmed that this was written at a time when non-strength deck stresses were thought to be low. A caveat should be therefore be added to the DDS equation Q.1-17 to check if primary stress is high in this deck.

### Analytical Tools

The current spreadsheet considers only straightforward cases. The spreadsheet should be implemented with the above suggested revisions. Also, the Excel Spreadsheet section makes note of further recommended revisions to the spreadsheet.

## References

American Institute of Steel Construction (1963). Design Manual for Orthotropic Steel Plate Deck Bridges

Jackson, R.I., and P.A. Frieze (1980). "Design of Deck Structures under Wheel Loads," The Royal Institution of Naval Architects

Naval Air Systems Command. *Aircraft Securing and Handling*, NAVAIR Technical Manual 17-1-537

Naval Sea Systems Command (1976). Structural Design Manual for Surface Ships of the U.S. Navy, NAVSEA 0900-LP-097-4010.

Naval Sea Systems Command (1982). Strength of Structural Members, Design Data Sheet 100 – 4, November.

Naval Sea Systems Command (1984). Structural Design and Analysis of Helicopter Handling Decks, Design Data Sheet 130 – 2, July.

Naval Sea Systems Command (1985). "Inboard Profile," Dwg. 101-6219378

Naval Sea Systems Command (1985). "Compartment and Access," Dwg. 101-6218623

Naval Sea Systems Command (1985). "Structural Scantling Plan," Dwg. 101-6218844

Naval Sea Systems Command. General Specifications for Ships of the U.S. Navy, or General Overhaul Specifications for Surface Ships, as appropriate for individual ship

Naval Sea Systems Command. Properties of Steel Shapes, and Plate – Beam Combinations used in Shipbuilding, MIL – HDBK – 264 (SH)

North Atlantic Treaty Organization. NATO Sea State Numerical Table for the Open Ocean North Atlantic: Design Criteria.

# **Bibliography**

Chiu, J.C., J.C. Kuo, and S.G. Arntson (1980). *Design Guideline for Helicopter Landing Deck Structures*, NDW-DTNSRDC 56002/30, Naval Surface Warfare Center, Carderock Division, July.

Critchfield M.O., J.L Rodd, and W.H. Hay (1980) Structural Evaluation of Helicopter Landing Decks on 270 Foot and 210 Foot USCG Cutters, DTNSRDC Rpt. 80/009, Naval Surface Warfare Center, Carderock Division, June.

Devine, E.A. and S.L. Morgan (1983) Development of Technical Approach to DDS130-3, Structural Design and Analysis of Wheeled and Tracked Decks, NDW-DTNSRDC 5602/39, Naval Surface Warfare Center, Carderock Division, September.

Heller, S.R. (1974) Structural Design of Ship Plating Subjected to Uniform Lateral Load, December.

Koch, D.A. and J.C. Adamchak (1981). A Comparison of Analytical and Finite Element Solutions for the Behavior of Rectangular Plates with Initial Distortion, Naval Surface Warfare Center, Carderock Division, January.

Kuo, J.C. (1975). *Plastic Design of Rectangular Plates Under Lateral Pressure*, Naval Surface Warfare Center, Carderock Division, June.

Lay, D. and M. Critchfield (1979) A Rapid Analysis Procedure for Determining Stresses in the Framing of Helicopter Landing Decks, Naval Surface Warfare Center, Carderock Division, November.

Naval Air Warfare Center, Aircraft Division (2001). *Shipboard Aviation Facilities Resume*, NAEC – ENG – 7576 Revision AU, January.

Naval Air Systems Command. Tires, Pneumatic, Aircraft, MIL - T - 5041G.

Naval Sea Systems Command (1957). Structural Design of Aircraft Handling Decks, DDS 130 - 1, November.

# **Bibliography**

Naval Sea Systems Command (1986). *Interface Standard for Shipboard Systems*, Section 301A, "Ship Motion and Attitude", MIL –STD – 1399, July.

Naval Sea Systems Command. Fabrication, Welding, and Inspection of Ship Hulls, MIL-S-1689(SH).

Naval Sea Systems Command. *Structural Design Procedure for Aircraft Elevators*, NAVSEA 0916-LP-045-7010.

Newmark, N.M.(1949). Analysis of Aircraft Carrier Steel Flight Decks.

Rodd, J.L. (1980) Rigid Vinyl Model Evaluation of Helicopter Landing Deck on USCG 270-Foot Cutter, Naval Surface Warfare Center, Carderock Division, March.

# NSWCCD-65-TR-2001/03 Appendix A

HELICOPT	ER TYPE:						
WEIGHT (I	KIP):						
		$\mathbf{W}_{\mathbf{M}} =$					
		$W_P =$		•			
CENTER O	F GRAVITY			•			
		$X_G =$		•			
TIEDOWN	DATA:	J		•			
		STORM SE	AS		MODERAT	E SEAS	
		$Z_{TS} =$			$Z_{TM} =$		
		$Y_{TS} =$		•	$Y_{TM} =$		•
		$OMEGA_S =$			OMEGA <sub>M</sub> =		
SAIL AREA	A/CENTER:	5		•	.,,		•
		STORM SE	AS		MODERAT	E SEAS	
		$a_{ss} =$			$a_{sm} =$		_
		$Z_{PS} =$		•	$Z_{PM} =$		-
GEAR SPA	CING (IN):						
				•			
MAIN GEA	D.	S =		•			
MAIN GEA	ın.	R =					
		b' =		•			
AUXILARY	GEAR:	_		•			
		R=					
		Pb =					
		b' =		•			
TIRE FOOT	TPRINT LOA			•			
	MAIN GEA	.R			AUXILARY		
	P <sub>T</sub> (KIP)	A (IN)	B (IN)		P <sub>T</sub> (KIP)	A (IN)	B (IN)

# NSWCCD-65-TR-2001/03 Appendix B

	L/CLASS:							
SHIP MOT	ON CONTA	NTS						
K1 =			K5 =		X	K9 =		X
K2 =		X	K6 =		Y	K10 =		Y
K3 =		Z	K7 =		z	K11 =		
K4 =			K8 =			K12 =		
	RAL PROPE	RTIES			***************************************			
DECK LOC			···					
2201120	SPC	)T 1	SPC	)T2	SPC	OT3	SPO	DT4
NAME:								
X							<u> </u>	
Y							<u> </u>	
Z								
			1				<u> </u>	
PLATE:			ī —					
Schedule							<u>.                                    </u>	
t=-								
wp=		,						
Fy=								
Fall=			<u> </u>			<del> </del>	]	
STIFFENE	3:		,				r	
Size							<u> </u>	
ws=			<u> </u>					
Fy=								
Fall=								
Area=			<u> </u>					
As=								
I =								
SMmin=								
L=								
n =								
b=								
BEAM:								
Size								
ws=								
Fy=								
Fall=								
Area=					···			
As=			-	•				
I =								
SMmin=								
L=								
n =				-				
PRIMARY	STRESS:		1		·		<u> </u>	
<u> </u>		)RM	STC	RM	STC	)RM	STC	)RM
Fpr =								
DECK FUN	ICTION:		L		I		L	
DECKTOR	STORM	MOD.	STORM	MOD.	STORM	MOD.	STORM	MOD.
Co =	STORW	MOD.	DIOM	14100.	DIOIN	141010.	DIOIUM	11100.
C0 -	l	l	l				L	

## NSWCCD-65-TR-2001/03 Appendix C

HELICOPTER TYPE:

**CH-60S** 

WEIGHT (KIP):

$$W_{M} = 23.5 \text{ kip}$$

$$W_{P} = 23.5 \text{ kip}$$

CENTER OF GRAVITY (IN):

$$Z_G = 72.3 \text{ in}$$
  
 $X_G = 65.4 \text{ in}$ 

**TIEDOWN DATA:** 

STORM SEAS

SAIL AREA/CENTER:

STORM SEAS

$$a_{ss} = 410.0 \text{ ft}^2$$
 $Z_{PS} = 63 \text{ in}$ 

**MODERATE SEAS** 

$$a_{sm} = 268 \text{ ft}^2$$

$$Z_{PM} = 76 \text{ in}$$

GEAR SPACING (IN):

$$r = 347 \text{ in}$$

$$s = 106 \text{ in}$$

MAIN GEAR:

$$R = 27.88 \text{ kip}$$
 $Pb = 30.4 \text{ kip}$ 
 $b' = 0.0 \text{ in}$ 

**AUXILARY GEAR:** 

$$R = 7.29 \text{ kip}$$
 $Pb = 13.0 \text{ kip}$ 
 $b' = 0.0 \text{ in}$ 

TIRE FOOTPRINT LOAD DATA:

MAIN GEAR

P <sub>T</sub> (KIP)	A (IN)	B (IN)
10.0	16.5	9.1
27.88	20.5	10.0

**AUXILARY GEAR** 

$P_{T}$ (KIP)	A (IN)	B (IN)
4.24	9.8	5.3
7.2	12.0	6.1

SHIP HUL	L/CLASS:	DDG 51 Cl	ass				
	ION CONTANTS						
K1 =	0.31000	K5 =	0.00130		K9 =	0.00263	
K2 =	0.00028	K6 =	0.00300		K10 =	0.00560	
K3 =	0.00263	K7 =	0.00560		K11 =	0.500	
K4 =	0.50000	K8 =	1.40000		K12 =	0.500	
	RAL PROPERTIES						
DECK LOC							
27.12.57	SPOT 1	SPO	OT2	SPC	OT3	SPC	)T4
NAME:	Centerline Fr 430 - TD						
X	193.00						
Y	0.00						
Z	10.97	<u> </u>					
PLATE:	HY - 80	Γ		T			
Schedule	38t	<b>_</b>					
t=	0.313 in	<u> </u>					
wp=	12.75 lbs/ft <sup>2</sup>						
Fy=	80 ksi						
Fall=	50 ksi						
STIFFENE				·			
Size	8x5.5x13# I-T						
ws=	12.83 lb/ft						
Fy=	51 ksi					<u> </u>	
Fall=	40 ksi						
Area=	3.77 in <sup>2</sup>						
As=	1.96 in <sup>2</sup>						
] =	97.1 in <sup>4</sup>						
SMmin=	17.8 in <sup>3</sup>						
L=	96 in						
n =	4				·		
b=	27 in						
BEAM:	HSS, 50t						
Size	14x6.75x34# I-T						
ws=	23.54 lb/ft						
Fy=	51 ksi						
Fall=	40 ksi				··		
Area=	6.92 in <sup>2</sup>						
As=	3.98 in <sup>2</sup>						
I =	429.7 in <sup>4</sup>						
SMmin=	52 in <sup>3</sup>						
L=	135 in						
n =	4						
PRIMARY							
	STORM	STO	ORM	STC	RM	STO	RM
Fpr =	6.551 ksi						
DECK FUN							
	STORM MOD.	STORM	MOD.	STORM	MOD.	STORM	MOD.
Co=	2.8 3.4	<u>.                                    </u>	<u></u>				

CALCULATIO	ON OF HELODI	CKIDADS			DATE:	3/15/01	T		PARKING C	ALCULATION	IS	
SHIP DATA:		DDG51 FLT	I		DAIL.	HELO DATA	:	CH-60S				
SPOT LOCA		CENTERLIN				WEIGHT (KII			30-2 Revised	Spreadsheet		
	NSTANTS (FOR					Wm =	23.500		d: September			
K1 =	0.31000	DIGITATION	K7 =	0.00560	Z	Wp =	23.500	Flight	Deck Loads a	nd Stresses		
K2 =	0.00028	X	K8 =	1.40000			GRAVITY (IN		Surface Warfa	re Center		
K3 =	0.00263		K9 =	0.00263	Х	Zg =	72.300		rock Division,	Code 651		
K4 =	0.50000		K10 =	0.00560		Xg =	65.400		stions for futu		ions should	
K5 =	0.00130	v	* K11 =	0.50000	·	TIEDOWN D			de to NSWCCI			
K6 =	0.00130	<del></del>	* K12 =	0.50000		STORM SEA		100 1110	MODERATE			
	E SEA CONSTA	NTC LICITAL				Zts =	69.900	IN	Ztm =	32.400	IN	
				0.30		Yts =	50.120		Ytm =	9.620		
	n in the hanger	! (NO=0 / Te	5=1)	<u>U_</u>		OMEGAs =	45.000		OMEGAm =	15.000		
	TION (FEET):		0.000			Zos =	67.020		Zom =	20.776		
<u> </u>	193.000	Y =	0.000			SAIL AREA/		110	20111 -	20.770	1114	
Z =	10.970								MODERATE	CEAC		
	L PROPERTIES	<u> </u>				STORM SEA	.5	F-72		3EA3	FT2	
PLATE:	HY-80					As =	410.000		Am =	393.300		i
t=	0.313					Zps =	63.000	IN	Zpm =	63.000	IIN	ļ
wp=	12.750	LBS/FT <sup>2</sup>				GEAR SPAC	ING (IN):					
Fy=	80.000	KSI				r =	347.000					
Fall=	52.000					s =	106.000					
	STIFFENER:		BEAM:			MAIN GEAR						
SIZE=	8x5.5x13#		14x6.75x34	#1-T		R=	27.880	KIP	1			
ws or wb=	12.830	···	23.540			Pb =	30.400					
	51.000		51.000			b'=	0.000		1		1	
Fy=						AUXILIARY (		111	+		-	
Fall=	40.000		40.000		-	· ·		1415	-		<u> </u>	<b> </b>
Area=	3.770		6.920	IN <sup>e</sup>		R=	7.290					<u> </u>
As=	1.960		3.980	IN <sup>2</sup>		Pb =	13.000	KIP				
1=	97.100		429.700			b'=	0.000				1	
			52.000				RINT LOAD D				1	
SMmin=	17.800							7010	AUXILIARY (	FAR	-	<del> </del>
L=	96.000		135.000	IIN		MAIN GEAR	<del></del>		Pt	A A	В	<del> </del>
n =	4_		4			Pt	A	B				
es OR eb =	0.692		0.692			10.000	16.500	9.100	4.240	9.800	5.300	
b≔	27.000	IN				27.880		10.000		12.000	6.100	
PRIMARY ST							TIRE FOOTP					
	STORM SEAS			MODERATE	SEAS		MAIN GEAR		AUXILIARY (			
Fpr=	6.551	KSI		3.276	KSI		"A DIMENSI		'A DIMENSI	ON'		
DECK FUNC	TION:						CONST =	14.263	CONST =	6.649		
	STORM SEAS			MODERATE	SEAS		SLOPE =	0.224	SLOPE =	0.743		
C0 =	2.800			3.400			'B DIMENSI	ON"	B DIMENSI	ON"		
	ED (N=0/Y=1):		0				CONST =	8.597	CONST =	4.154		
MOTION FAC			<u>_</u>				SLOPE =		SLOPE =	0.270		
WOTION FAC	STORM SEAS			MODERATE	CEAC	·	OLO: L =	0.000	020. 2	0.2.0		
		0.409		Nxm =	0.204				<del> </del>			
	Nxs =				0.423		l		1	····		
	Nys =	0.846		Nym =								
0.00	Nzs =	1.908		Nzm =	1.454	<b> </b>	+	-	+			<del>                                     </del>
SHIP MOTIO					0540				ļ <del></del>			
	STORM SEAS			MODERATE					<del></del>		<del> </del>	<del></del>
<u></u>	Fxs =	9.605		Fxm =	4.803						<del> </del>	<del></del>
	Fys =	19.883		Fym =	9.941		ļ				-	<u> </u>
<u> </u>	Fzs =	44.828		Fzm =	34.164		ļ			ļ	<del></del>	<b></b>
WIND LOAD	S:			ļ								
	STORM SEAS			MODERATE								
	Fws =	6.150		Fwm =	2.950	L			1			
SHIP MOTIO	N FORCES/GE	AR REACTION	NS:				GEAR REAC					
	LONGITUDINA			ATHWARTS				LONGITUD			ATHWARTS	
		MODERATE		STORM	MODERATE			STORM	MODERATE		STORM	MODERATE
FI =	9.605	4.803		19.883	9.941	T	CONVENTIO	NAL				
Ft =	19.883	9.941		9.605	4.803	İ	Rm =	38.38	28.726		40.522	29.797
Fd =	44.828	34.164		44.828	34.164		Ra =	10.450			12.592	8.510
Rm =	38.381	28.726		40.522	29.797	<b> </b>	M=	-209.213			-1065.760	-1046.149
		5.438	<u> </u>	4.306	4.368	<del> </del>	<del> </del>		327.070			
Ra =	6.448			-1065.76		IF M <= 0	R2 =	36.40	22.897	<del> </del>	30.468	19.927
M =	-209.21	-617.88			NO NO	\ - U	R1 =	1.974			10.054	9.869
UNSTABLE?		NO .		NO 10.054		<b> </b>					15.755	7.752
R1 =	1.974	5.829		10.054	9.869	15 14 . 0	Ff =	26.03		<del> </del>	9.535	9.535
R2 =	36.407	22.897		30.468		IF M >0	R1 =	9.53	9.535	ļ		
T OR FP =	0.000	0.000		0.000	0.000	<b> </b>	Ff =	21.400		-	16.073	8.472
R=	36.407	22.897		30.468	19.927		R2 =	33.47		<u></u>	30.669	20.068
P≃	36.407	22.897		30.468	19.927		ļ		R CRITICAL GE	AR LOADS (	,	
TIRE LOAD:							Rm =	38.38		L	40.522	29.797
Pt=	36.407	22.897		30.468	19.927		Ra =	6.44	5.438		4.306	4.368
TIRE DIMEN							RAST					
A=	21.064	19.385		21.064	18.721		Rm =	36.37	27.725	1	36.379	27.725
B=	10.127	9.749		10.127	9.600	<del> </del>	Ra =	8.44			8.449	
D=	10.12/	3.749		10.127	3.000		, .u -	0.77	0.733	1	0.43	<del>                                     </del>
L	<u> </u>					L	<u> </u>	1		<u> </u>	1	

SHIP DATA:		DDG51 FLT	<u> </u>			HELO DATA	L	CH CCC		DADVING CALC	U AT'S'	
SPOT LOCAT		CENTERLIN				HELO DATA		CH-60S		PARKING CALCU	LATIONS	<u> </u>
							RAST CONT	INUED				
ALIGNMENT	WITH RESPEC		NERS:				M =	-103.142	-564.840	-8	46.196	-936.368
	PARALLEI				NDICULAR		IF M <= 0 F					
A' =	21.064	19.385		10.127	9.600		R2 =	35.406	22.396		28.396	18.892
B'= A'/b =	10.127 0.780	9.749 0.718		21.064	18.721		R1 =	0.973	5.329		7.983	8.834
B'/b=	0.780	0.718		0.375 0.780	0.356 0.693		IF M >0	0.535	0.525		0.505	0.505
STIFFFNER F	BENDING ANA	VSIS:		0.780	0.693		R1 = FP =	9.535 17.125	9.535 8.414		9.535	9.535 1.404
	LONGITUDINA			ATHWARTSH	IIPS		R2 =	43.969	26.603		29.949	19.593
	STORM	MODERATE			MODERATE			40.505	20.003		23.343	19.090
Φ <u></u>	0.972	0.974		0.903	0.920							* * * * * * * * * * * * * * * * * * * *
Φ.									-			
1/1	0.009	0.008		0.043	0.035							
γ . PS			0.001									
Φ = 2			0.992									
b'=	0.000	0.000	0.552	0.000	0.000							
b'/b=	0.000	0.000		0.000	0.000							······································
Φ =	1.000	1.000		1.000	1.000							
$M_o/PL_s=$	0.145	0.147		0.158	0.159							
	0.145	0.14/		0.158	0.159							
Y = SB			0.033									
M <sub>c</sub> /RL <sub>s</sub> =			0.02835									
R <sub>o</sub> =	3.595	2.349		1.446	1.064							
B <sub>o</sub> =	5.063	4.875		10.532	9.360							
Φ =	0.150	0.144		0.309	0.275							
M <sub>o</sub> =	487.836	311.662		414.019	276.944						-	
M <sub>c</sub> =	39.546	24.875		32.840	21.524							
M <sub>d</sub> =	5.069	3.863		5.069	3.863							
M <sub>s</sub> =	532.451	340.400		451.928	302.331						- 1	
f <sub>sb</sub> =	29.913	19.124		25.389	16.985							
SM <sub>reqd</sub> =	15.918	9.269		13.511	8.232							
	HEAR FORCE							C1 CALCULA	TIONS			
V <sub>o</sub> /P=	0.966	0.971		0.966	0.972			LONGITUDIN	AL	ATH	WARTSH	IPS
V <sub>o</sub> =	34.179	21.652		26.570	17.828			STORM	MODERATE	STO	RM i	MODERATE
V <sub>d</sub> =	0.317	0.241		0.317	0.241			0.116	0.121		0.102	0.111
V <sub>s</sub> =	34.495	21.894		26.887	18.069			0.117	0.122		0.097	0.104
f <sub>sv</sub> =	17.600	11.170		13.718	9.219							
As <sub>reqd</sub> =	1.437	0.912		1.120	0.753							
C <sub>1</sub> =	0.11671311	0.100		0.100								
Ψ=	1.000	0.122 1.000		0.102 1.000	0.111 1.000				· · · · · · · · · · · · · · · · · · ·			
φ- f <sub>P</sub> =	92.942	50.279		67.876	39.803						<del></del>	
t <sub>reqd</sub> =	0.337	0.308		0.288	0.274							
-reqd-	0.337	0.308		0.200	0.2/4							
LOAD AND S	TRESS SUMM	ARY:										
		NGITUDINAL		A <sup>-</sup>	THWARTSHIF	PS .						<u> </u>
	STORM	MODERATE	LANDING	STORM	MODERATE	LANDING						
R=	36.41	22.90	27.88	30.47	19.93	27.88						
P= fsb=	36.41 36.46	22.90 22.40	27.88 23.02	30.47 31.94	19.93 20.26	27.88						
fsv=	17.60	11.17	13.51	13.72	9.22	23.31 12.61						
f <sub>P</sub> =	92.94	50.28	59.49	67.88	39.80	52.22				<del></del>		<del> </del>
FS fsb=	1.10	1.79	1.74	1.25	1.97	1.72				<del>  -</del>		
FS fv=	1.36	2.15	1.78	1.75	2.60	1.90						
FS fp=	0.86	1.03	0.87	1.18	1.31	1.00						·
				l i				·				
										<del></del>		

PAGE: 3/4

													PAGI
	ION OF HELO				DA	TE:	03/15/01		OU COC	LANDING CA	LCULATION	15	
SHIP DATA	• •		51 FLT				AIRCRAFT I		CH-60S				
SPOT LOCA				E FR 430			WEIGHT (KI						
	ONSTANTS (FO	OR DI	STANCE				Wm =	23.500					
K1 =	0.31000			K7 =	0.00560 Z		Wp =	23.500	<b>.</b> .				
K2 =	0.00028			K8 =	1.40000			GRAVITY (IN	):				
K3 =	0.00263	Z		K9 =	0.00263 X		Zg =	72.300					
K4 =	0.50000			K10 =	0.00560 Y		Xg =	65.400					
K5 =	0.00130			* K11 =	0.50000		TIEDOWN D			140DED4TC 0	EAC		
K6 =	0.00300	Υ		* K12 =	0.50000		STORM SEA			MODERATE S		INI	
					E SEA CONSTAN	ITS	Zts =	69.900		Ztm =	32.400		
				USUALLY	K11=K12=0.50		Yts =	50.120		Ytm =	9.620		
DECK LOCA	ATION (FEET):						OMEGAs =			OMEGAm =	15.000		
X =	193.000		Y =	0.000			Zos =	67.020	IN	Zom =	20.776	IN	
Z =	10.970						SAIL AREA/						
STRUCTUR	AL PROPERTI	ES					STORM SEA	-	_	MODERATE S		_	
PLATE:							As =	410.000	FT <sup>2</sup>	Am =	268.000	FT <sup>2</sup>	
t=	0.313	IN					Zps =	63.000	IN	Zpm =	76.000	IN	
wp=	12.750		/FT <sup>2</sup>				GEAR SPAC	ING (IN):					
Fy=	80.000						r=	347.000					
Fall=	52.000						s =	106.000					
ı an-	STIFFENER:			BEAM:			MAIN GEAR						
SIZE=	8x5.5x13#	•		14x6.75x34	#I-T		R =	27.880	KIP				
ws=	12.830			23.540			Pb =	30.400					
ws= Fy=	51.000			51.000			b'=	0.000					
Fall=	40.000			40.000			AUXILIARY						
				6.920			R =	7.290	KIP				
A=	3.770							13.000					
As=	1.960			3.980			Pb =						
1 =	97.100			429.700			b'=	0.000					
SMmin=	17.800			52.000				PRINT LOAD [	DATA				
L=	96.000			135.000	IN		MAIN GEAR		_	AUXILIARY G			_
n =	4.000			4.000			Pt	Α	В	Pt	Α		В
es OR eb =	0.692			0.692			10.000	16.500	9.100		9.800		5.300
b=	27.000	IN					27.880	20.500	10.000		12.000	•	5.100
PRIMARY S	TRESS:							TIRE FOOTF	•				
	STORM SEA	\S			MODERATE SEA	AS		MAIN GEAR		AUXILIARY G			
Fpr=	6.551	KSI			3.276 KS	31		"A DIMENSI		"A DIMENSIO			
DECK FUNC	CTION:							CONST =		CONST =	6.649		
	STORM SEA	\S			MODERATE SEA	AS		SLOPE =	0.224	SLOPE =	0.743		
C0 =	XXXXXXXXX	(			3.400			B DIMENSI		B DIMENSIO			
IS RAST US	SED (N=0/Y=1	1):		0				CONST =		CONST =	4.154		
MOTION FA								SLOPE =	0.050	SLOPE =	0.270		
	STORM SEA	\S			MODERATE SEA	AS							
	Nxs =		0.409		Nxm =	0.204							
	Nys =		0.846		Nym =	0.423							
	Nzs =		1.908		Nzm =	1.454							

CALCULATI	ION OF HELODEC	K LOADS CENTERLINE FR 430
Jane .		ANDING
İ	LONGITUDINAL	
R=	27.880	27.880
P=	27.880	27.880
TIRE LOAD:		27.000
Pt=	27.880	27.880
TIRE DIMEN		27,000
A=	20.500	20.500
B=	10.000	10.000
ALIGNMEN	WITH RESPECT	TO STIFFENERS:
	PARALLEL	PERPENDICULAR
A'=	20.500	10.000
B'=	10.000	20.500
A'/b =	0.759	0.370
B'/b=	0.370	0.759
1		
	_	INDING
ĺ.	LONGITUDINAL	ATHWARTSHIPS
Φ ± 1/0	0.973	0.907
Φ =	0.008	0.041
γ =		0.001
PS Φ =		
2		0.992
b*=	0.000	0.000
b*/b=	0.000	0.000
Φ =	1.000	1.000
M <sub>o</sub> /PL <sub>s</sub> =	0.145	0.158
Y = SB		0.033
M <sub>c</sub> /RL <sub>s</sub> =		0.028
R <sub>o</sub> =	2.788	1.360
B <sub>0</sub> =	5.000	10.250
Φ =		
4	0.148	0.301
M <sub>o</sub> =	375.558	380.961
M <sub>c</sub> =	30.285	30.067
M <sub>d</sub> =	3.863	3.863
M <sub>s</sub> =	409.706	414.891
f <sub>sb</sub> =	23.017	23.308
SM <sub>reqd</sub> ≃	12.249	12.404
STIFFENER	SHEAR FORCE AN	IALYSIS:
V_/P=	0.967	0.967

LOAD AND	STRESS SUMMARY:		_
	LAND	ING	
	LONGITUDINAL	ATHWARTSHIPS	
R=	27.880	27.880	
P=	27.880	27.880	
fsb=	23.017	23.308	
fsv=	13.510	12.607	
fp=	59.492	52.224	
FS fsb=	1.738	1.716	-
FS fv=	1.776	1.904	-
FS fp=	0.874	0.996	-

V<sub>o</sub>/P=

V<sub>o</sub>=

 $V_d =$ 

 $V_s = f_{sv} = f_{sv}$ 

 $C_1 =$ 

ψ=

f<sub>P</sub>=

t<sub>regd</sub>=

As<sub>regd</sub>= 1 PLATE ANALYSIS:

0.967

26.239

0.241

26.480

13.510

1.103

0.118

1.000

59.492

0.335

0.967

24.469

0.241

24.710

12.607

1.030

0.104

1.000

52.224

0.314

LANDING CALCULATIONS CH-60S	PAGE: 4/4
	LANDING CALCULATIONS CH-60S

# **Annotation and Definitions**

$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	Α	- contact length of tire	in
$ \begin{array}{cccccccccccccccccccccccccccccccccccc$			in
$ \begin{array}{cccccccccccccccccccccccccccccccccccc$			in <sup>2</sup>
$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	$A_s$	- shear area of member (depth of member x web thickness)	
$\begin{array}{cccccccccccccccccccccccccccccccccccc$		· · · · · · · · · · · · · · · · · · ·	in <sup>2</sup>
$\begin{array}{llllllllllllllllllllllllllllllllllll$		•	in <sup>2</sup>
$\begin{array}{cccccccccccccccccccccccccccccccccccc$		•	in <sup>2</sup>
$\begin{array}{cccccccccccccccccccccccccccccccccccc$		_	in
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	B'	- patch width of loaded tire on deck, perpendicular to stiffener	in
$\begin{array}{llllllllllllllllllllllllllllllllllll$	$B_0$	· · · · · · · · · · · · · · · · · · ·	in
$\begin{array}{llllllllllllllllllllllllllllllllllll$		- stiffener spacing	in
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	b'	- center to center spacing between dual tire on a gear	
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	b"	- center to center spacing between dual patches	in
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	$b_e$	- effective width of deck plating	in
$\begin{array}{cccccccccccccccccccccccccccccccccccc$		- center of gravity of helicopter	
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	CP	- center of pressure of sail area	
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	$C_{o}$		
$\begin{array}{cccccccccccccccccccccccccccccccccccc$		- non-dimensionalized bending moment coefficient of plating	
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	c	- center to center spacing of dual tires on a gear	in
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	d		in
$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	E	- modulus of elasticity	ksi
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	$e_S$	- effective stiffener span length factor	
$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	$e_{\mathrm{B}}$	- effective beam span length factor	
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	$F_{all}$	- allowable stress of material	ksi
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	$F_b$	- allowable stress of material	ksi
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	$F_{D}$	<ul> <li>vertical helicopter force due to ship motion</li> </ul>	kip
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	$\mathbf{F}_{\mathbf{F}}$	- tire friction force	kip
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	$F_L$	- Ship motion force longitudinal to helicopter	kip
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	$\mathbf{F}_{\mathbf{P}}$	- RAST system holdown force	kip
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	$\mathbf{F}_{T}$	- Ship motion force transverse to helicopter	kip
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	$F_{\mathbf{W}}$	- wind load	=
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	$\mathbf{F}_{\mathbf{x}}$		
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	$\mathbf{F}_{\mathbf{y}}$	- transverse ship motion load	
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	$F_z$	<u>-</u>	_
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	_		
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	_		
$\begin{array}{cccccccccccccccccccccccccccccccccccc$		<del>-</del>	
$I_S$ - moment of inertia of plate-stiffener section in $^4$ $K_{1-12}$ - ship motion constants from ship specifications $I_B$ - beam span length in $I_S$ - stiffener span length in			
$K_{1-12}$ - ship motion constants from ship specifications $L_B$ - beam span length in $L_S$ - stiffener span length in	_	<u>-</u>	
$L_{B}$ - beam span length in $L_{S}$ - stiffener span length in		<u>-</u>	in
L <sub>S</sub> - stiffener span length in			•
M - helicopter overturning moment kip-in			
	M	- helicopter overturning moment	kıp-ın

$M_{C}$	-	stiffener bending moment correction for elastic supports	kip-in
$M_{\rm D}$	-	stiffener bending moment due to dead load of structure	kip-in
$M_{o}$	-	stiffener bending moment due to live loading, assumes rigid support	kip-in
Ms	-	total bending moment in stiffener	kip-in
n	-	number of spans over entire length of member	
P	-	patch load	kip
$P_b$	-	tire bottoming load	kip
$P_T$	-	tire load	kip
R	-	critical gear reaction, landing load (helicopter characteristic)	kip
$R_A$	-	auxiliary gear reaction, tail or nose gear	kip .
$R_{M}$	_	total main gear reaction	kip
$R_{o}$		beam characteristic load	kip/in
$R_1$		main gear reaction, nearest to tiedown	kip
$R_2$	_	main gear reaction, farthest from tiedown	kip
r		distance between main and auxiliary gears	in
$SM_{min}$	_	minimum section modulus for stiffener-plate section	in <sup>3</sup>
SM <sub>reqd</sub>		required minimum section modulus for stiffener-plate section	in <sup>3</sup>
Sivireda S	_	distance between $R_1$ and $R_2$ of main gear	_
T T	_	tiedown force	in 1-i
t	_	plating thickness	kip
t <sub>f</sub>		thickness of stiffener flange	in in
	_	required plating thickness	in
t <sub>reqd</sub> t <sub>w</sub>		thickness of stiffener web	in
$V_{\rm D}$		stiffener shear due to dead load	kip
$V_0$		stiffener shear due to loading	kip
Vs		total shear in stiffener	kip
$W_{m}$	-	maximum weight of helicopter	_
$\mathbf{W}_{p}$	_	parked weight of helicopter	kip
=	_	unit beam weight	kip lb/ft
W <sub>B</sub>		dead weight of plating and stiffeners	
W <sub>D</sub>		width of stiffener bottom flange	kip/in
W <sub>f</sub>		weight of plating	in lb/ft²
Wp	_	weight of stiffener	
$egin{array}{c} \mathbf{w_S} \ \mathbf{X} \end{array}$	_	longitudinal distance from specified center of motion or	lb/ft
Λ	_	amidships to helicopter center of gravity	ft
$X_G$	_	longitudinal distance from helicopter CG to longitudinal	11
ΛG	_	center of motion of the ship	in
Y	_	transverse distance from helicopter CG to ship centerline	in ft
$Y_{TM}$	_	transverse distance from centerline to helicopter tiedown	11
1 IM		in moderate seas	in
$Y_{TS}$	_	transverse distance from centerline to helicopter tiedown in	111
118	_	storm seas	in
Z	_	vertical distance from flight deck to vertical center of	in
L	-	motion of the ship	£.
$Z_{G}$		•	ft
_	-	height of helicopter CG above flight deck	in
$Z_{om}$	-	equivalent tiedown lever arm in moderate seas	in

$Z_{os}$	- equivalent tiedown lever arm in storm seas	in
$Z_{P}$	- height of helicopter CP above deck	
$Z_{TM}$	<ul> <li>vertical height above deck to tiedown in moderate seas</li> </ul>	in
$Z_{TS}$	<ul> <li>vertical height above deck to tiedown in storm seas</li> </ul>	in
$\phi_1$	- patch width load distribution factor for stiffener	
$\phi_2$	- plating load distribution factor for stiffener	
ф3	- dual patch equivalent load factor for stiffener	
φ4	- beam loading coefficient	
γps	- relative rigidity coefficient of plate-stiffener section	
γsв	- relative rigidity coefficient of stiffener-beam section	
$\eta_{xm}$	- longitudinal ship motion factor in moderate seas	
$\eta_{ym}$	- transverse ship motion factor in moderate seas	
$\eta_{zm}$	- vertical ship motion factor in moderate seas	
$\eta_{xs}$	- longitudinal ship motion factor in storm seas	
$\eta_{ys}$	- transverse ship motion factor in storm seas	
$\eta_{zs}$	<ul> <li>vertical ship motion factor in storm seas</li> </ul>	
$\sigma_{P}$	- allowable plate bending stress	ksi
$\sigma_{PR}$	- primary stress from hull girder design	ksi
$\sigma_{\mathrm{SB}}$	- allowable stiffener bending stress	ksi
$\sigma_{\mathrm{SV}}$	- allowable stiffener shear stress	ksi
$\Omega_{ extsf{s}}$	- tiedown angle to deck in storm seas	deg
$\Omega_{m}$	- tiedown angle to deck in moderate seas	deg
Ψ	- plating dual patch equivalent load factor	

## Glossary

aft toward, to, or near the stern of the ship amidship at or near the midship section of the ship

armament weaponry aboard the helicopter athwartship across the breath of the ship

auxiliary gear complementary gear to the main gear bulkheads a vertical steel partition in a ship

chains used to anchor down the helicopter to prevent movement

chocks a heavy fitting placed on the helicopter tires

compartment a plan drawing describing the use and subdivision on a level of the ship

and access

critical gear load the combination of the gear reaction and loading distribution which creates

the worst loading condition

fore and aft in line with the length of the ship, longitudinal

heave the up and down motion of a ship along the vertical axis

hull the body of a ship, includes shell plating, framing, decks, and bulkheads inboard profile elevation view of the ship compartments along the ship's centerline

longitudinal any member, shell, deck, or bulkhead running fore and aft

main gear the two primary gears of the helicopter midship at or near the middle point of a ship's length

non-strength deck longitudinal deck not contributing to the cross-sectional strength of the

hull

load patch tire contact dimensions with respect to the ship structure an oscillatory motion of a ship about the transverse axis

primary stress resulting stress on the ship structure due to bending of the ship hull from

wave action

roll an oscillatory motion of a ship about the longitudinal axis sway the lateral motion of a ship along the transverse axis

scantling plan structural framing plan

ship motions the different resulting movements of the ship as a result of impacting

waves

significant wave

height

the average height of the one third highest waves

stanchions a pillar or upright post, column

static gear load the portion of the helicopter load at parking weight without ship motions

applied

stiffener an angled bar, T-section, channel, etc., used to stiffen plating of a

bulkhead, deck, or other member

strength deck longitudinal deck contribution to the cross-sectional strength of the hull

surge the fore and aft motion of a ship along the longitudinal axis tiedown force equivalent force of all the applied tiedowns on a helicopter length and width of the tire as a result of the helicopter load

transverse athwartship, direction across the breath of the ship transverse frame athwartship members forming the ship's cross-section oscillatory motion of a ship about the vertical axis